

4. Ignition Timing

A: INSPECTION

1) Before checking the ignition timing, check the following item:

(1) Check the air cleaner element is free from clogging, spark plugs are in good condition, and hoses are connected properly.

(2) Check the malfunction indicator light does not illuminate.

2) Warm-up the engine.


3) When checking the ignition timing, connect the timing light to the #1 cylinder spark plug cord and illuminate the timing mark with the timing light.

4) Start the engine and check the ignition timing at idle speed as shown below.

Ignition timing [BTDC/rpm]:

$10^{\circ} \pm 8^{\circ} / 650$ (MT Model)

$15^{\circ} \pm 8^{\circ} / 700$ (AT model)

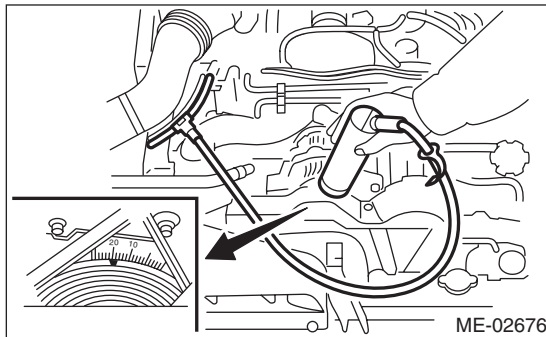

If the timing is not correct, check the ignition control system. <Ref. to EN(H4SO)(diag)-2, Basic Diagnostic Procedure.>