

Remote Control Mirror System

GLASS/WINDOWS/MIRRORS

7. Remote Control Mirror System

A: WIRING DIAGRAM

Refer to “Remote Control Mirror System” in the wiring diagram. <Ref. to WI-198, WIRING DIAGRAM, Remote Control Mirror System.>

B: INSPECTION

1. SYMPTOM CHART

Symptoms	Inspection order
All function does not operate.	<ol style="list-style-type: none">1. Check the fuse.2. Check the remote control mirror switch.3. Check the wiring harness.
One side of the mirror motor does not operate.	<ol style="list-style-type: none">1. Check the remote control mirror switch.2. Check the mirror motor.3. Check the wiring harness.
Mirror heater does not operate.	<ol style="list-style-type: none">1. Check the defogger switch.2. Check the mirror heater relay.3. Check the mirror heater.4. Check the wiring harness.

C: NOTE

For operation procedures of each component of the remote control mirror system, refer to the respective sections.

- Scalp cap:<Ref. to GW-21, Scalp Cap.>
- Outer mirror assembly:<Ref. to GW-25, Outer Mirror Assembly.>
- Outer mirror:<Ref. to GW-27, Outer Mirror.>
- Remote control mirror switch:<Ref. to GW-29, Remote Control Mirror Switch.>