


## 9. Outer Mirror Assembly

### A: REMOVAL

- 1) Remove the front door trim. <Ref. to EI-60, FRONT DOOR, REMOVAL, Door Trim.>
- 2) Remove the outer mirror assembly.
  - (1) Disconnect the connector.
  - (2) Remove the bolts, and then remove the outer mirror assembly.

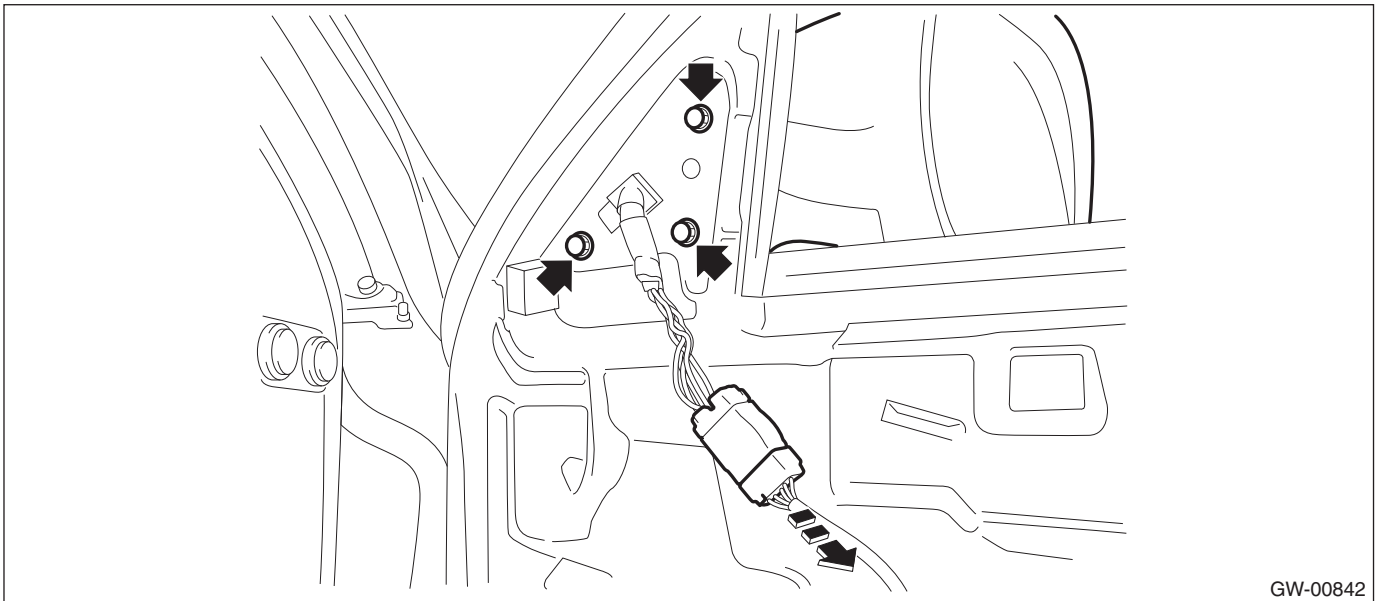

GW-00842

### B: INSTALLATION

Install each part in the reverse order of removal.

#### ***Tightening torque:***


***Outer mirror assembly: 4.5 N·m (0.46 kgf-m, 3.3 ft-lb)***

# Outer Mirror Assembly

GLASS/WINDOWS/MIRRORS

## C: INSPECTION

- 1) Disconnect the outer mirror connector.
- 2) Apply battery voltage between the outer mirror connector terminals and check the mirror operation.

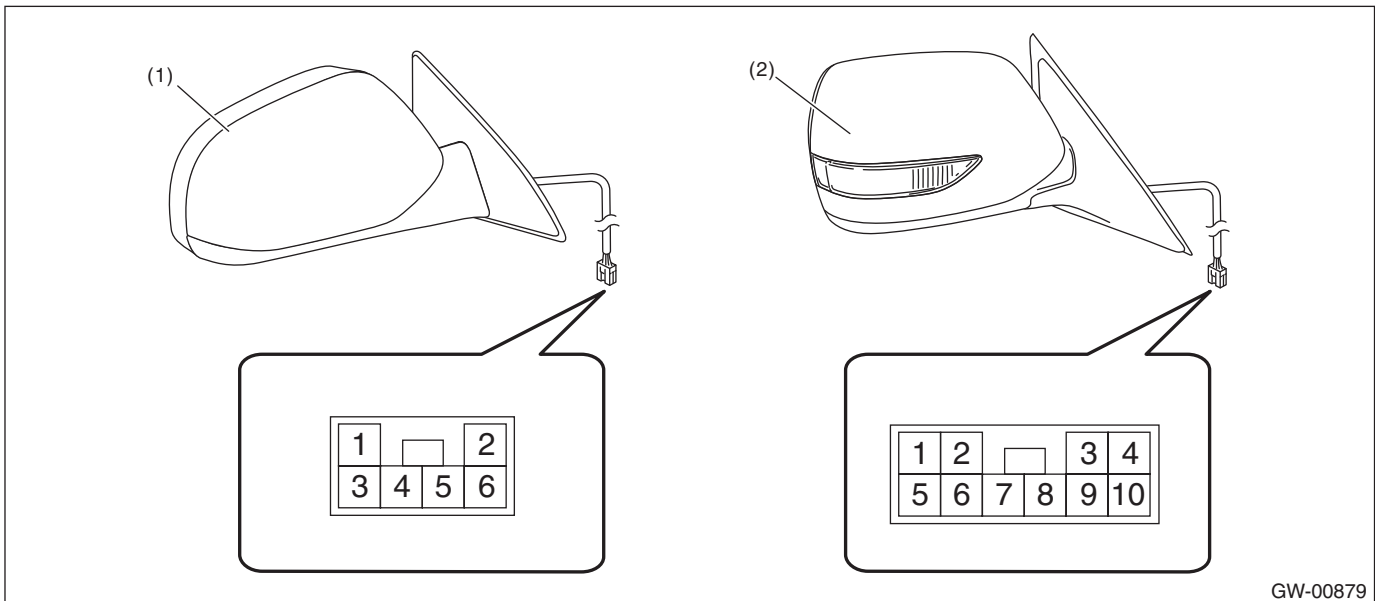

GW-00879

- (1) Model without retractable mirror      (2) Model with retractable mirror

### • Model without retractable mirror

Terminal No.	Inspection conditions	Switch position
—	—	OFF
2 (+) — 5 (-)	Apply battery voltage between terminals.	UP
5 (+) — 2 (-)	Apply battery voltage between terminals.	DOWN
4 (+) — 2 (-)	Apply battery voltage between terminals.	LEFT
2 (+) — 4 (-)	Apply battery voltage between terminals.	RIGHT

### • Model with retractable mirror

Terminal No.	Inspection conditions	Switch position
—	—	OFF
3 (+) — 8 (-)	Apply battery voltage between terminals.	UP
8 (+) — 3 (-)	Apply battery voltage between terminals.	DOWN
7 (+) — 3 (-)	Apply battery voltage between terminals.	LEFT
3 (+) — 7 (-)	Apply battery voltage between terminals.	RIGHT
2 (+) — 6 (-)	Apply battery voltage between terminals.	Folding
6 (+) — 2 (-)	Apply battery voltage between terminals.	Unfolding

- 3) If the inspection results in improper operation, replace the outer mirror.

### NOTE:

There always exists a current of 1.2 mA at the electric retraction terminal.