

Basic Diagnostic Procedure

BODY CONTROL SYSTEM (DIAGNOSTICS)

1. Basic Diagnostic Procedure

A: PROCEDURE

CAUTION:

- Subaru Select Monitor is required for reading DTC, performing diagnosis and reading current data.
- Remove foreign matter (dust, water, oil, etc.) from the body integrated unit connector during removal and installation.
- For model with immobilizer, registration of immobilizer is necessary after the replacement of control module, etc. For details, refer to the “PC application help for Subaru Select Monitor”.

NOTE:

- To check harness for open or short circuits, shake the suspected trouble spot or connector.
- Check List for Interview <Ref. to BC(diag)-3, Check List for Interview.>

| | Step | Check | Yes | No |
|---|---|--|---------------------------------------|-----------------------------------|
| 1 | CHECK PRE-INSPECTION. Ask the customer when and how the trouble occurred using the interview check list. <Ref. to BC(diag)-3, Check List for Interview.> | Did you interview the customer? | Go to step 2. | Interview the customer. |
| 2 | BASIC INSPECTION. Check components which might affect body control. <Ref. to BC(diag)-6, INSPECTION, General Description.> | Is the component that might influence the body control problem normal? | Go to step 3. | Repair or replace each component. |
| 3 | CHECK DTC. 1) Read the DTC. <Ref. to BC(diag)-13, OPERATION, Read Diagnostic Trouble Code (DTC).> NOTE: If the communication function of the Subaru Select Monitor cannot be executed properly, check the communication circuit. <Ref. to LAN(diag)-47, COMMUNICATION FOR INITIALIZING IMPOSSIBLE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> 2) Record all DTCs and freeze frame data. | Is DTC displayed on Subaru Select Monitor? | Go to step 5. | Go to step 4. |
| 4 | PERFORM GENERAL DIAGNOSTICS. Inspect using “General Diagnostics Table”. <Ref. to BC(diag)-40, General Diagnostic Table.> | Is result of inspection OK? | The body control system is normal. | Go to step 5. |
| 5 | PERFORM DIAGNOSIS. 1) Correct the cause of trouble. 2) Perform the Clear Memory Mode. <Ref. to BC(diag)-14, OPERATION, Clear Memory Mode.> 3) Read the DTC. <Ref. to BC(diag)-13, OPERATION, Read Diagnostic Trouble Code (DTC).> | Is DTC displayed on Subaru Select Monitor? | Repeat step 5 until DTC is not shown. | Finish the diagnosis. |