

List of Diagnostic Trouble Code (DTC)

BODY CONTROL SYSTEM (DIAGNOSTICS)

12.List of Diagnostic Trouble Code (DTC)

A: LIST

| DTC | Contents | Content of diagnosis | Note |
|-------|---|---|---|
| None | Communication for Initializing Impossible | Subaru Select Monitor communication is open or shorted. | <Ref. to LAN(diag)-47, COMMUNICATION FOR INITIALIZING IMPOSSIBLE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| B1100 | Integ. Unit System Error | Body integrated unit internal error | <Ref. to BC(diag)-26, DTC B1100 INTEG. UNIT SYSTEM ERROR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| B1101 | BATT p/supply malfunction cont. | Open or short in battery power supply control circuit | <Ref. to BC(diag)-27, DTC B1101 BATT P/SUPPLY MALFUNCTION CONT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| B1102 | BATT p/supply malfunction backup | Battery power supply backup circuit is open or shorted. | <Ref. to BC(diag)-29, DTC B1102 BATT P/SUPPLY MALFUNCTION BACKUP, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| B1103 | Ignition power failure | IGN power supply circuit is open or shorted. | <Ref. to BC(diag)-31, DTC B1103 IGNITION POWER FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| B1104 | ACC power failure | ACC power supply circuit is open or shorted. | <Ref. to BC(diag)-33, DTC B1104 ACC POWER FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| B1106 | shift lock circuit Failure | Ground short of shift lock circuit | <Ref. to BC(diag)-35, DTC B1106 SHIFT LOCK CIRCUIT FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| B1401 | M Collation NG | Malfunction related immobilizer | <Ref. to BC(diag)-37, DTC B1401 M COLLATION NG, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| B1402 | Immobilizer Key Collation NG | Malfunction related immobilizer | <Ref. to BC(diag)-37, DTC B1402 IMMOBILIZER KEY COLLATION NG, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| B1403 | E/G request NG | Malfunction related immobilizer | <Ref. to BC(diag)-37, DTC B1403 E/G REQUEST NG, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| B1405 | SCU Collation NG | Malfunction related immobilizer | <Ref. to BC(diag)-37, DTC B1405 SCU COLLATION NG, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| B1406 | SCU_EEPROM_NG | Malfunction related immobilizer | <Ref. to BC(diag)-37, DTC B1406 SCU_EEPROM_NG, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| B1500 | Keyless UART com. Malfunction | Open or short circuit in keyless UART circuit | <Ref. to BC(diag)-38, DTC B1500 KEYLESS UART COM. MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |