


# Relay and Fuse

SECURITY AND LOCKS

## 2. Relay and Fuse

### A: LOCATION

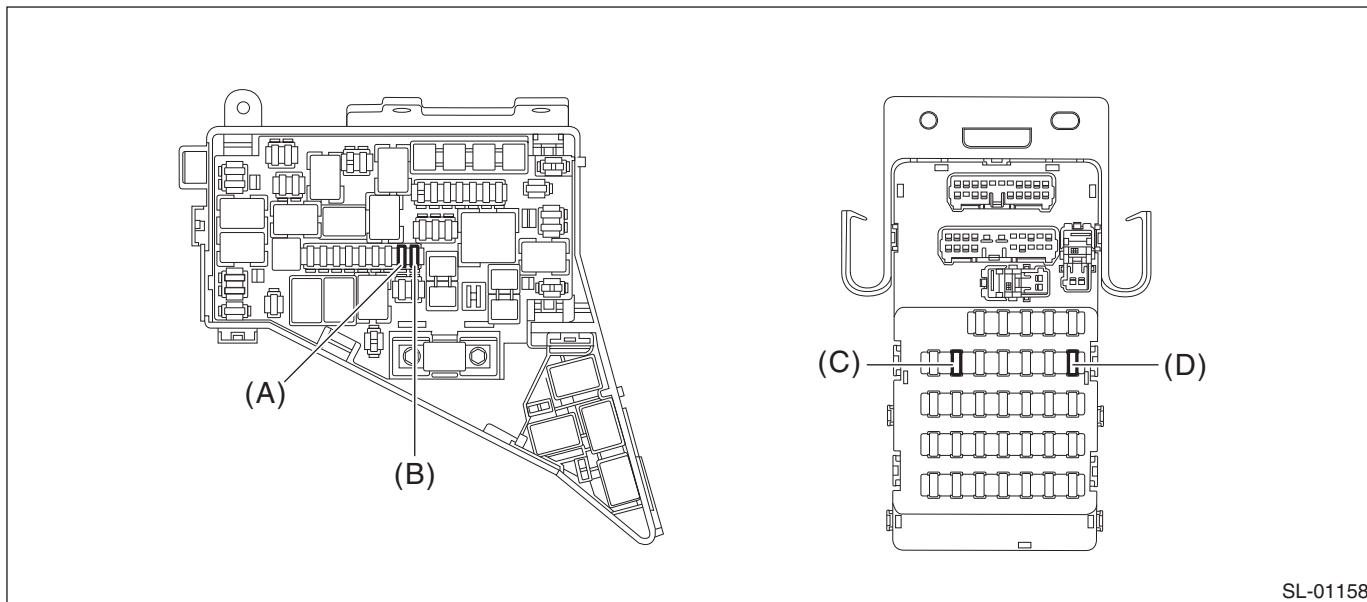

Main Fuse Box	Fuse 15A (K/L)	(A)
	Fuse 20A (K/L, SEC)	(B)
Relay & fuse box	Fuse 7.5A (SEC)	(C)
	Fuse 15A (SEC)	(D)

### B: INSPECTION

#### 1. CHECK FUSE.

- 1) Remove the fuse and check visually.
- 2) If the fuse is blown out, replace the fuse.