


# Trunk Lid Latch and Actuator Assembly

## SECURITY AND LOCKS

### 15.Trunk Lid Latch and Actuator Assembly

#### A: REMOVAL

- 1) Disconnect the harness connector.
- 2) Remove the bolts, and remove the trunk lid latch & actuator assembly.

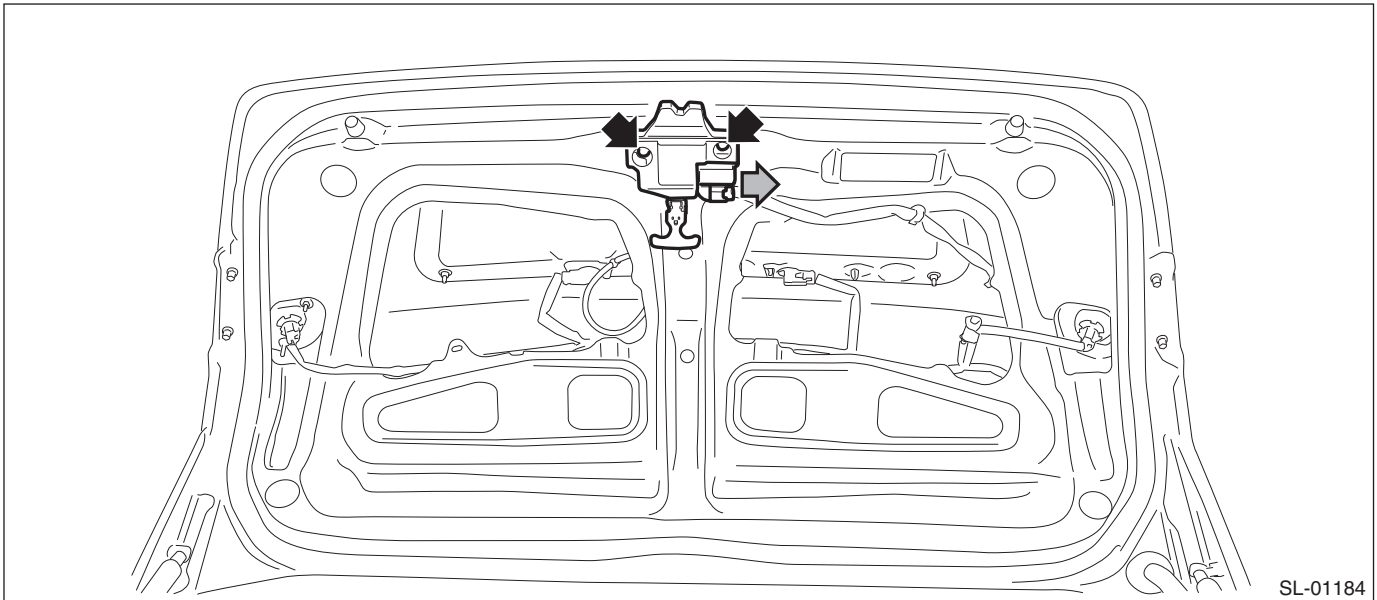

SL-01184

#### B: INSTALLATION

Install each part in the reverse order of removal.

#### *Tightening torque:*

*Refer to "COMPONENT" of "General Description". <Ref. to SL-3, REAR GATE LOCK AND TRUNK LID LOCK, COMPONENT, General Description.>*

## C: INSPECTION

### 1. TRUNK LID LATCH

Check if the trunk lid latch operates normally.


If latch deformation, abnormal wear, or unsmooth lock operation is observed, replace the rear gate latch & actuator assembly.

### 2. LOCK ACTUATOR

1) Disconnect the trunk lid latch & actuator assembly connector.

2) Check the door lock operation by applying battery voltage between the terminals of trunk lid latch & actuator.

**Preparation tool: Circuit tester**

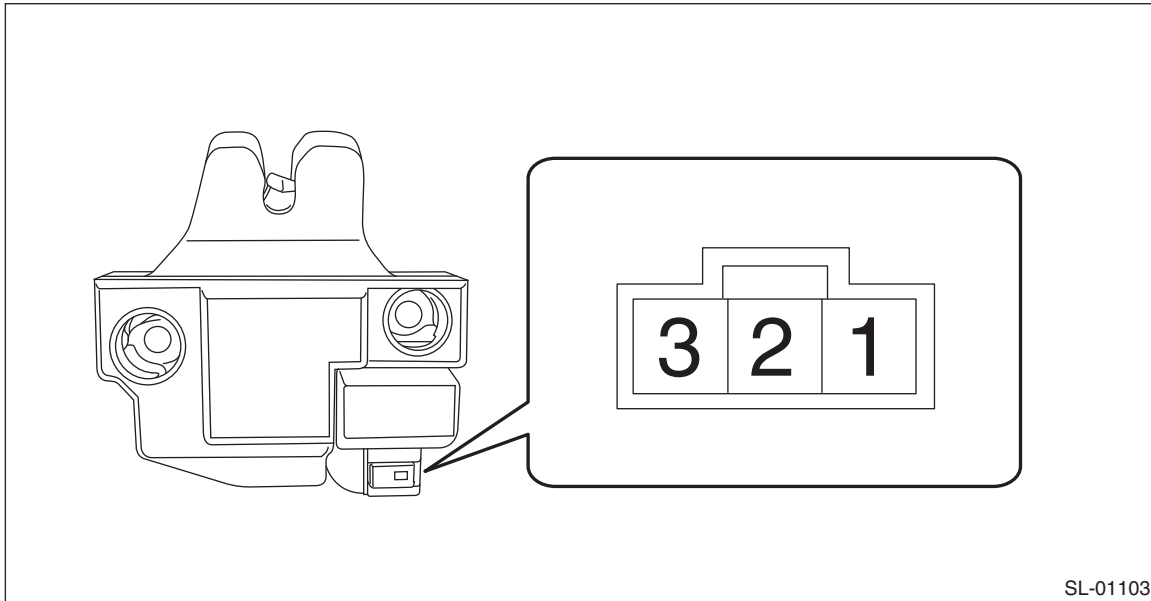

SL-01103

Inspection conditions	Terminal No.	
	LOCK → UNLOCK	1
	+	-

3) If the actuator does not operate normally, replace the trunk lid latch & actuator assembly