


22. Keyless Entry Control Module

A: REMOVAL


1. SEDAN MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear shelf trim. <Ref. to EI-120, REMOVAL, Rear Shelf Trim.>
- 3) Remove the keyless entry control module.
 - (1) Disconnect the connector.
 - (2) Remove the bolt and remove the keyless entry control module.

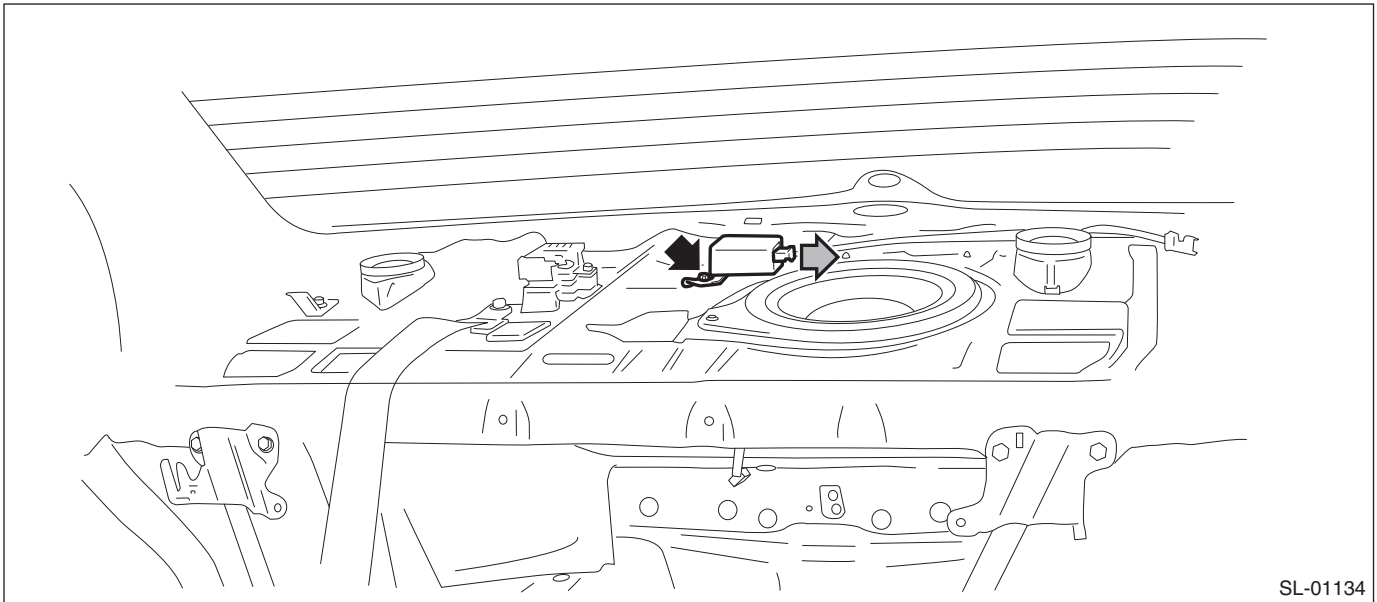

2. OUTBACK MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear quarter trim LH. <Ref. to EI-109, REMOVAL, Rear Quarter Trim.>
- 3) Remove the keyless entry control module.
 - (1) Disconnect the connector.
 - (2) Remove the bolt and remove the keyless entry control module.

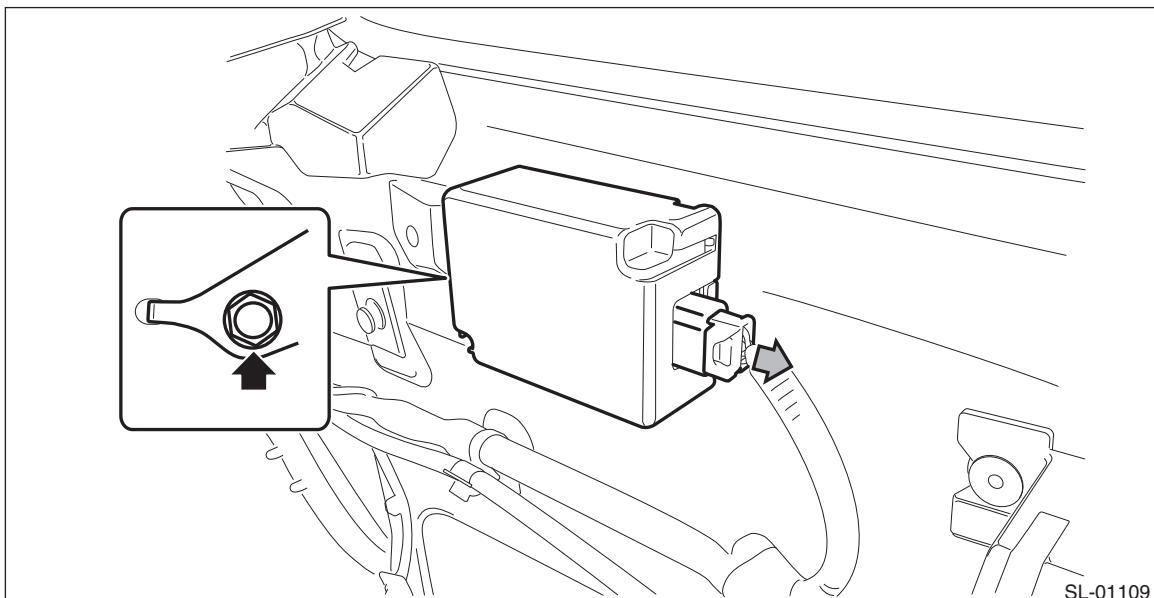

Keyless Entry Control Module

SECURITY AND LOCKS

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

Keyless entry control module: 13 N·m (1.33 kgf-m, 9.6 ft-lb)