


## 23. Keyless Buzzer

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the front bumper face. <Ref. to EI-39, REMOVAL, Front Bumper.>
- 3) Remove the keyless buzzer.
  - (1) Disconnect the connector.
  - (2) Remove the clip, and remove the keyless buzzer.

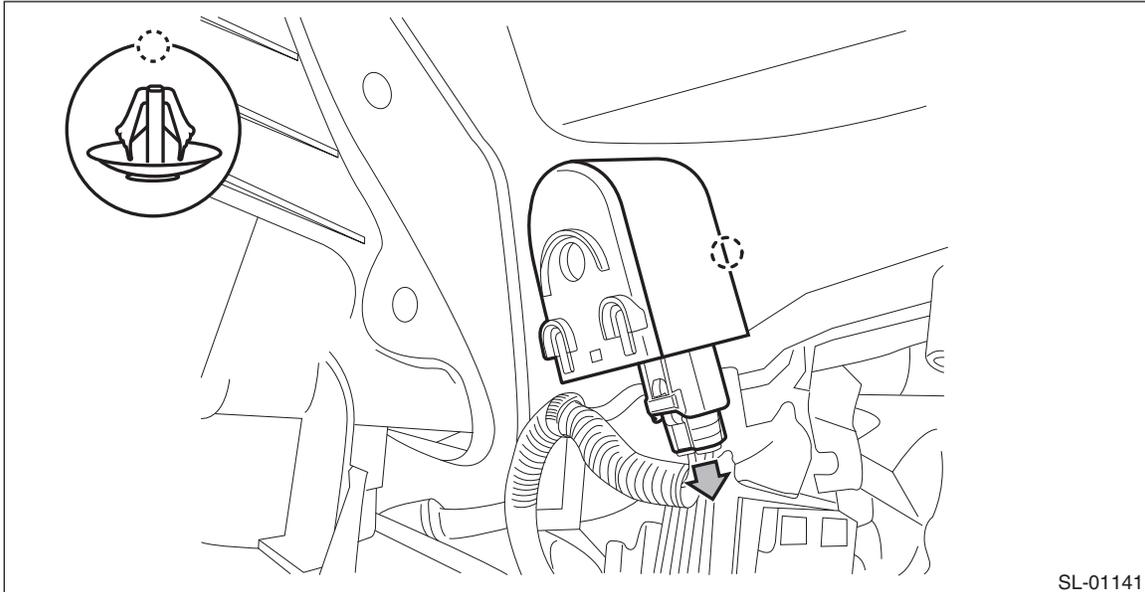

### B: INSTALLATION

Install each part in the reverse order of removal.

### C: INSPECTION

Using the Subaru Select Monitor, perform forced operation of the keyless buzzer. <Ref. to BC(diag)-20, OPERATION, User Customizing.>

#### NOTE:

If it does not sound, replace the keyless buzzer.