

26. Immobilizer Control Module

A: NOTE

The control of immobilizer system is carried out in body integrated unit. For the detailed procedure, refer to the section of body integrated unit.

- Removal:<Ref. to SL-72, REMOVAL, Body Integrated Unit.>
- Installation:<Ref. to SL-72, INSTALLATION, Body Integrated Unit.>