


27. Immobilizer Antenna


A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the steering column cover.
 - (1) Remove the screws by turning the steering wheel to right and left.

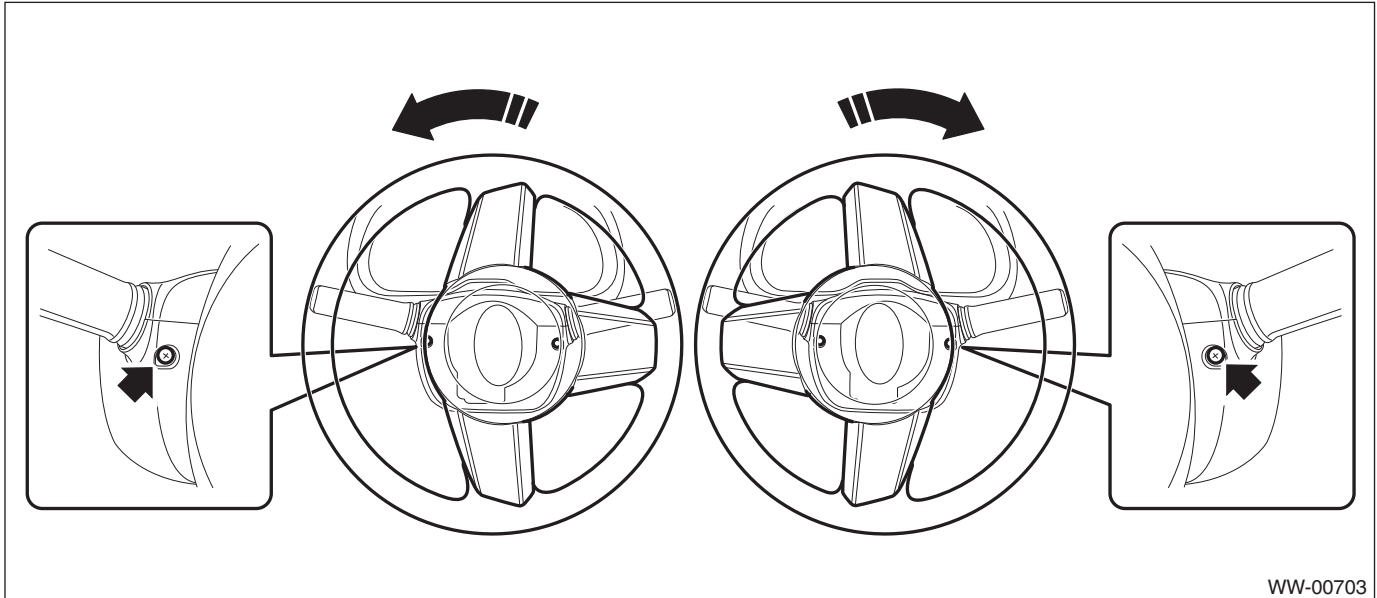


WW-00703

- (2) Release the claws and remove the steering column lower cover.

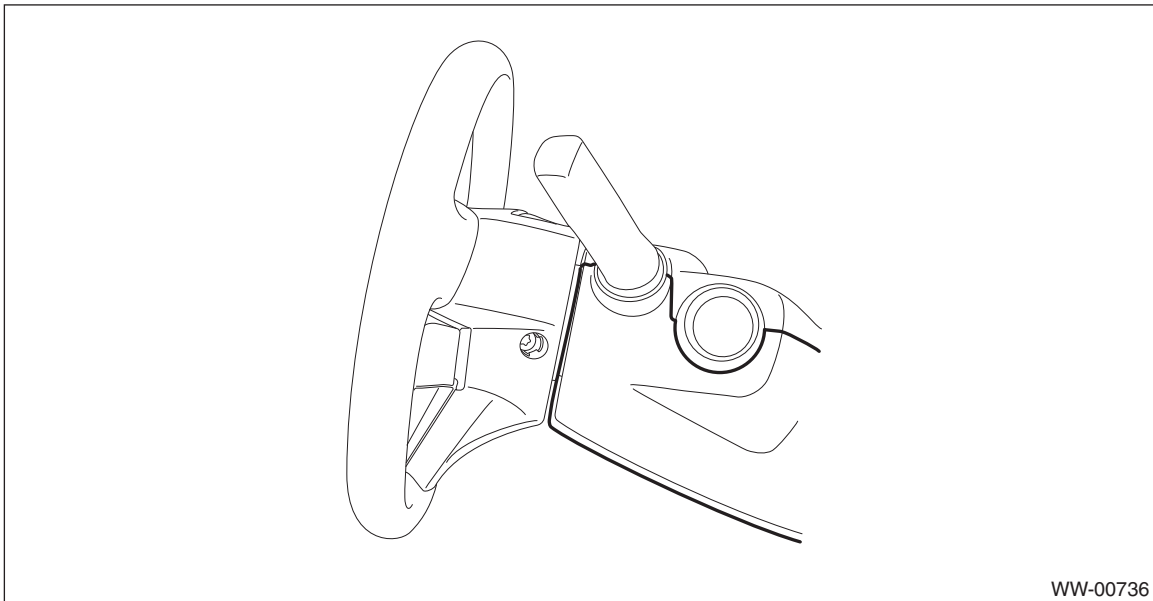

WW-00736

(3) Separate the steering column upper cover and steering upper cover, and remove the steering column upper cover.

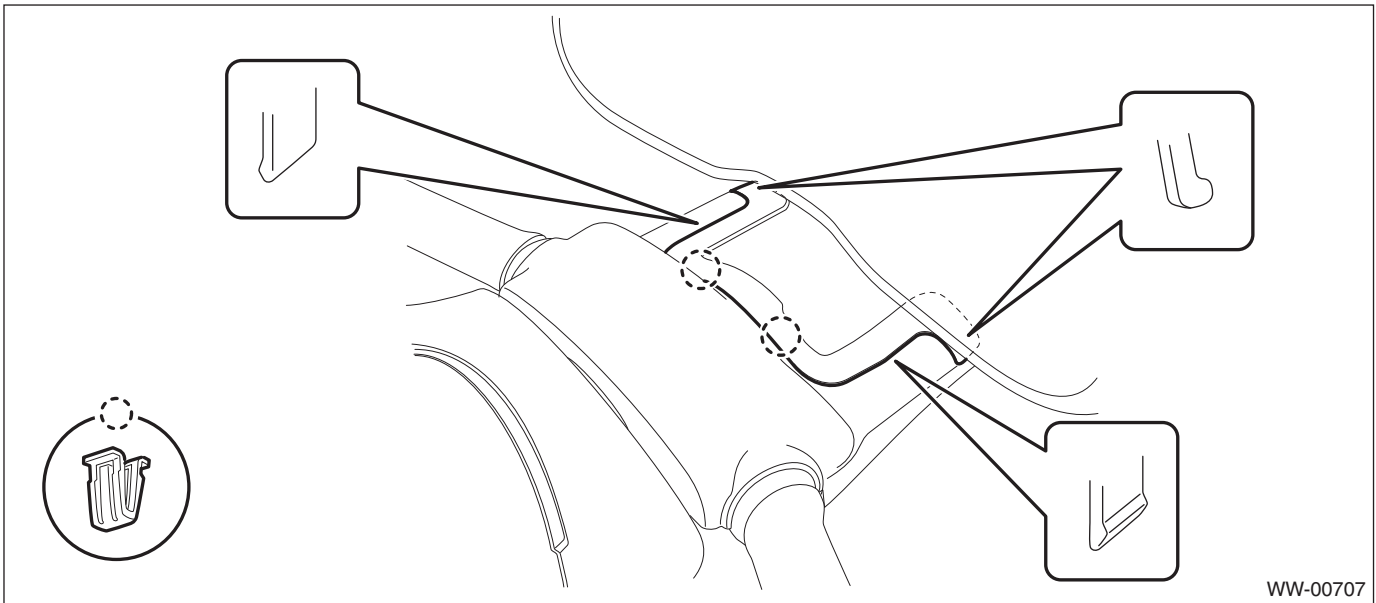


WW-00707

3) Remove the immobilizer antenna.

CAUTION:

Do not apply excessive force to remove the immobilizer antenna and lock. Otherwise they may be broken because those parts are the products made of a plastic.

- (1) Disconnect the connector and remove the screw.
- (2) Remove the ignition illumination light and release the claws, then detach the immobilizer antenna.

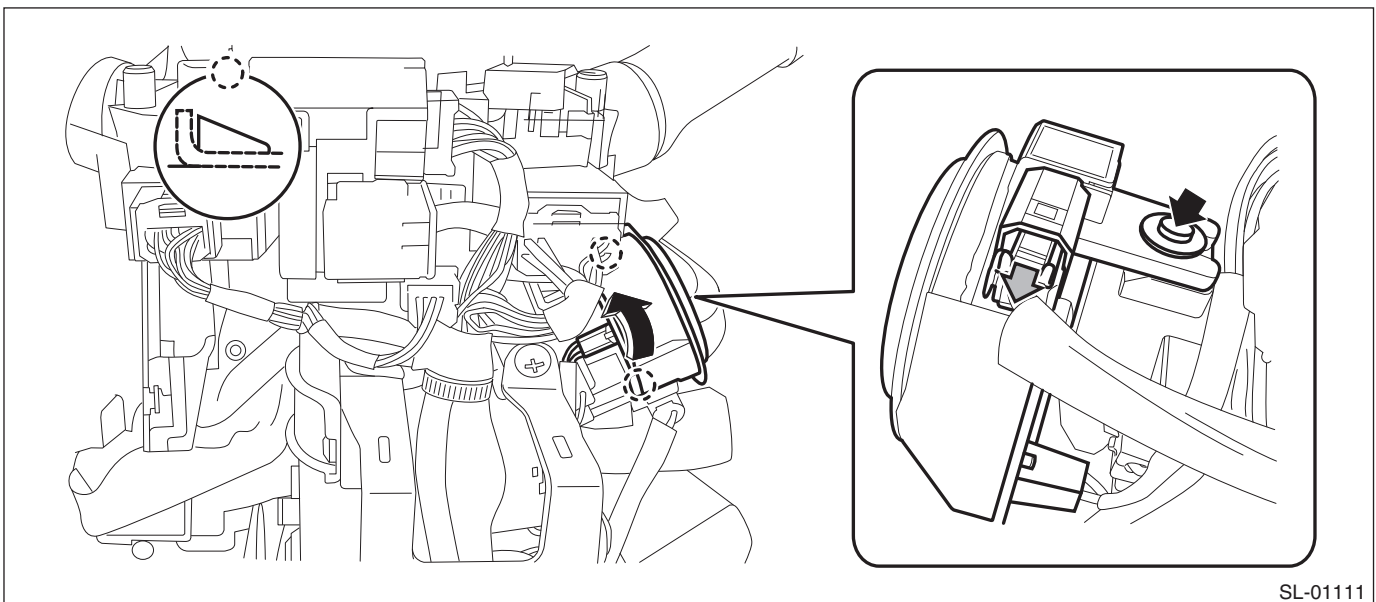

SL-01111

B: INSTALLATION

Install each part in the reverse order of removal.

Immobilizer Antenna

SECURITY AND LOCKS
