


Relay and Fuse

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

2. Relay and Fuse

A: LOCATION

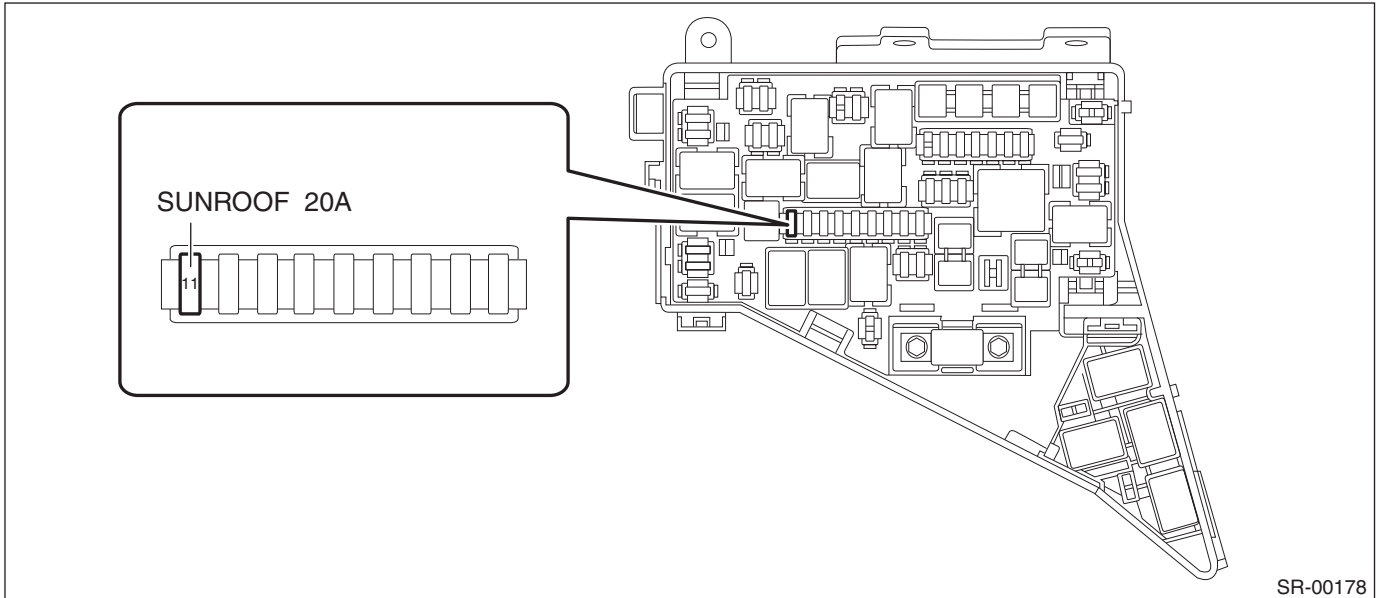

B: INSPECTION

1. CHECK FUSE.

- 1) Remove the fuse and check visually.
- 2) If the fuse is blown out, replace the fuse.