


## Glass Lid

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

### 4. Glass Lid

#### A: REMOVAL


- 1) Completely close the glass lid, and then open the sunshade.
- 2) Disconnect the claws and then remove the lid cover.

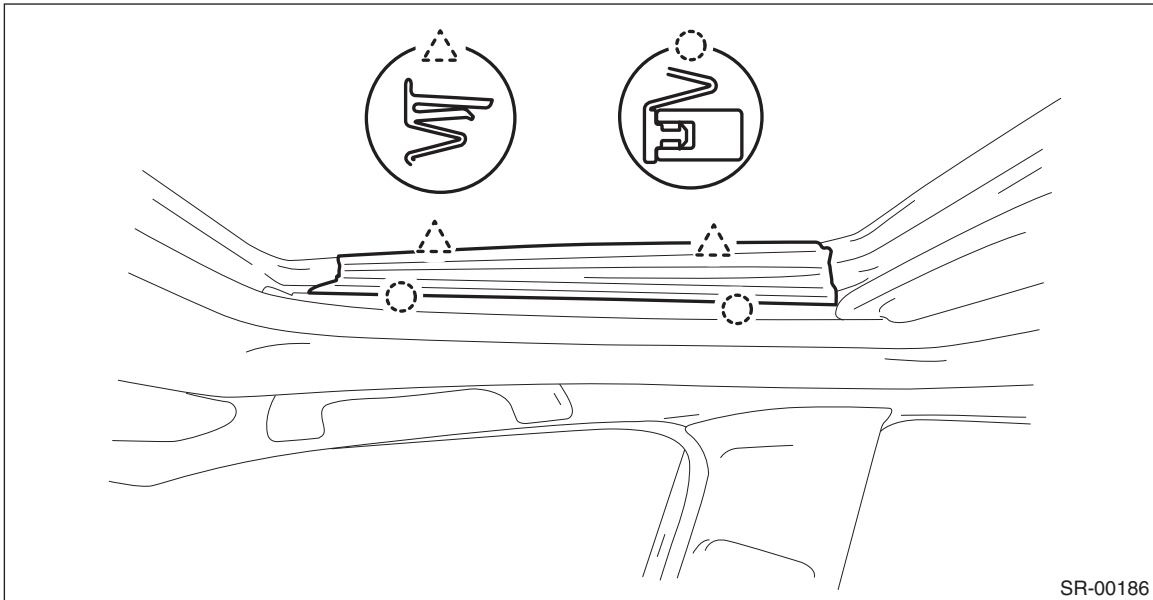

- 3) Remove the bolts, then remove the glass lid.

#### CAUTION:

Be careful not to damage the glass lid.

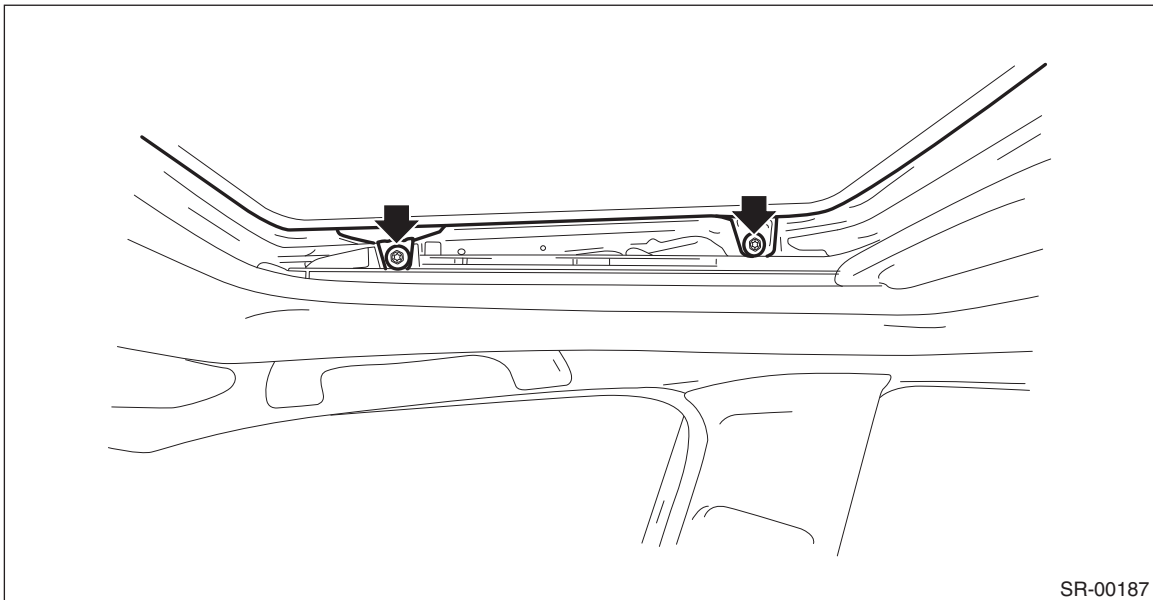

#### B: INSTALLATION

Install each part in the reverse order of removal.

# Glass Lid

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)


## C: ADJUSTMENT

Adjust the height of the glass lid and roof panel.

- Loosen the glass lid mounting bolts (A), and then adjust the height with moving the lid side.

***Difference in height between weather strip and roof panel L:***

***$0 \pm 1.0$  mm ( $0 \pm 0.04$  in)***

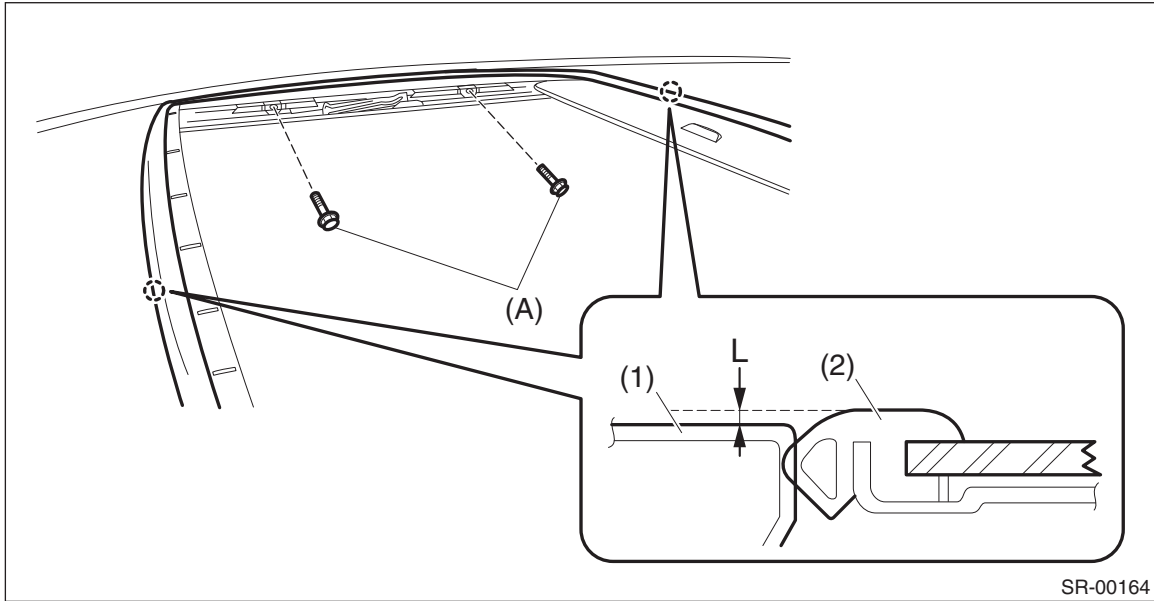

SR-00164

(1) Roof panel

(2) Weather strip

## Glass Lid

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

---

### D: FORCED DRIVE

If the glass lid does not operate or the sunroof motor is not supplied with power, move the glass lid using the hexagon wrench.

**Width across flat 5 mm (0.20 in)**

#### CAUTION:

**After a forced operation, make sure to perform an initialize operation. <Ref. to SR-5, INITIALIZE OPERATION, OPERATION, Sunroof Control System.>**

- 1) Remove the spot map light. <Ref. to LI-62, REMOVAL, Spot Map Light.>
- 2) Insert the hexagon wrench securely until it touches the motor shaft edge.
- 3) Turn the hexagon wrench, and move the glass lid.
  - Turning right, the glass lid open.
  - Turning left, the glass lid close.

#### CAUTION:

**Be careful not to damage the adjacent parts with the rod end when moving the glass lid with the hexagon wrench.**

