


13. Roof Rail

A: REMOVAL

- 1) Remove the roof trim. <Ref. to EI-146, OUTBACK MODEL, REMOVAL, Roof Trim.>
- 2) Remove the curtain airbag module. <Ref. to AB-62, OUTBACK MODEL, REMOVAL, Curtain Airbag Module.>

CAUTION:

- Refer to “CAUTION” of “General Description” before handling the airbag module. <Ref. to AB-9, CAUTION, General Description.>
 - Be careful not to damage the curtain airbag module during removal.
- 3) Remove the nine installing nuts.

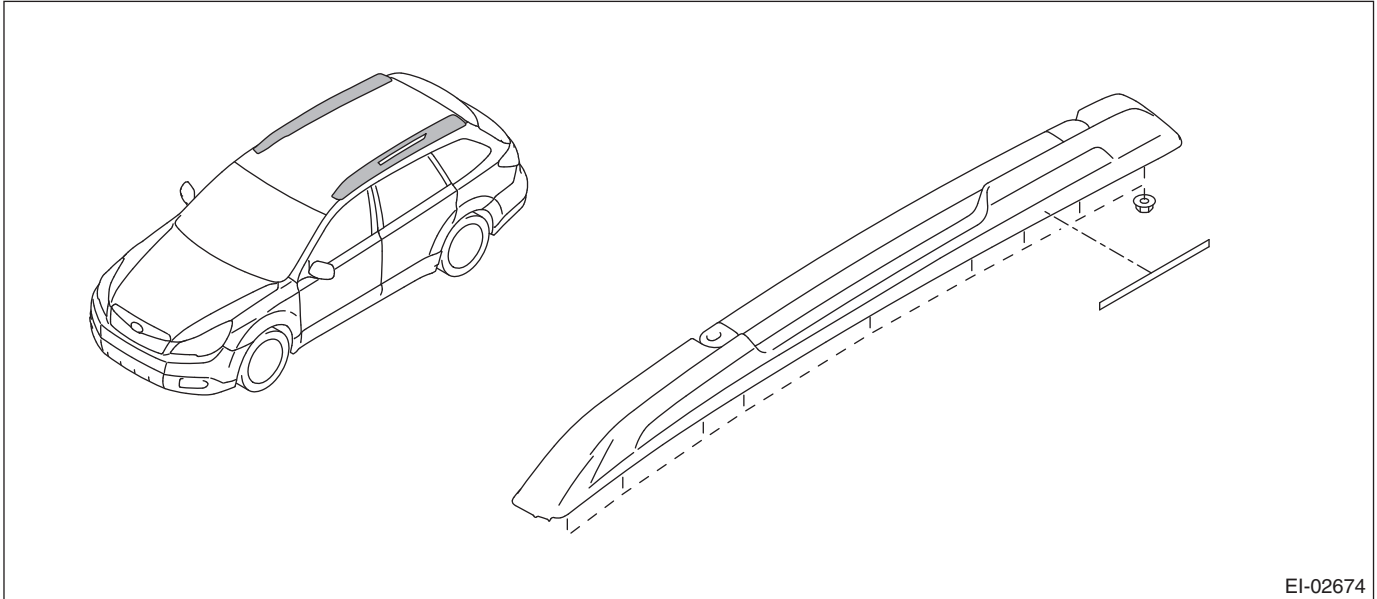

B: INSTALLATION

Install each part in the reverse order of removal.

CAUTION:

When removing or installing the roof rail, be careful not to scratch the body panel with the stud bolt of roof rail.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)