

Assist Grip


EXTERIOR/INTERIOR TRIM

26. Assist Grip

A: REMOVAL

Remove the assist grip assembly.

- 1) Remove the cap (a).
- 2) Pull the assist grip toward you (to the vehicle center) and remove the metal clip from the bracket.

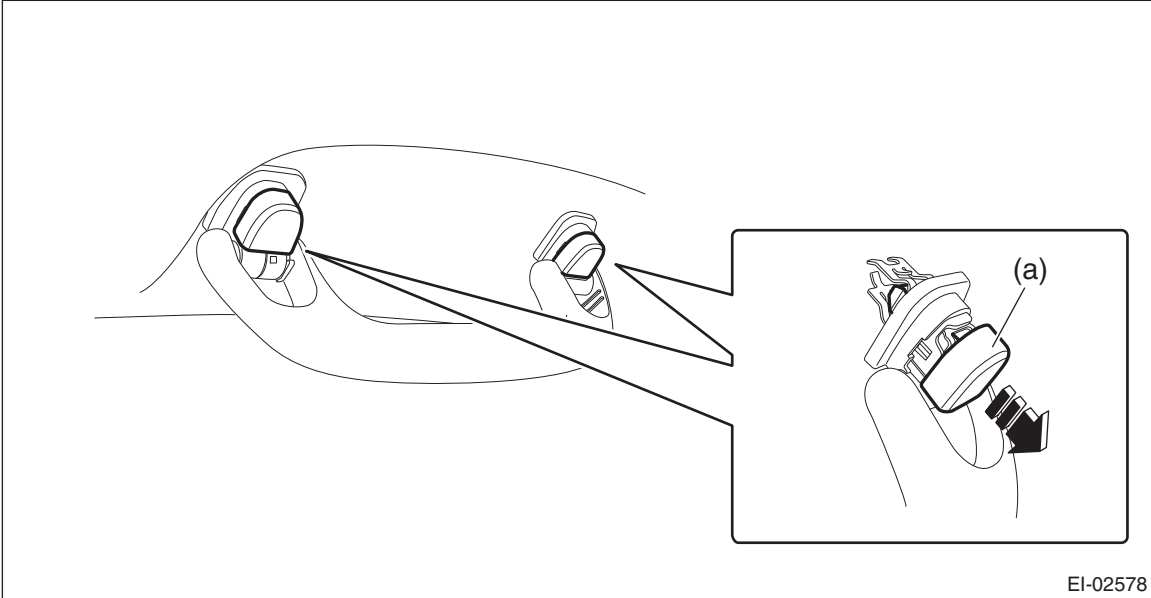

EI-02578

B: INSTALLATION

Install each part in the reverse order of removal.