


# Trunk Lid Garnish

EXTERIOR/INTERIOR TRIM


## 30.Trunk Lid Garnish

### A: REMOVAL

- 1) Remove the trunk lid trim.
  - (1) Remove the trunk handle.
  - (2) Remove the clips and the trunk lid trim.

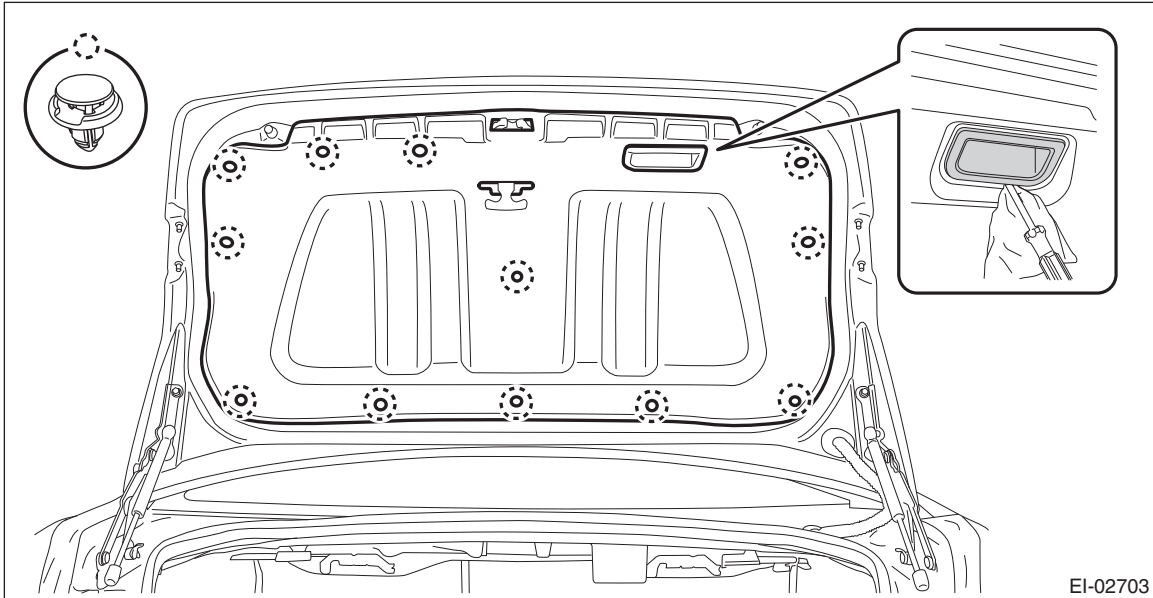

- 2) Remove the trunk lid garnish.
  - (1) Remove the nuts.
  - (2) Remove the clips and the trunk lid garnish.

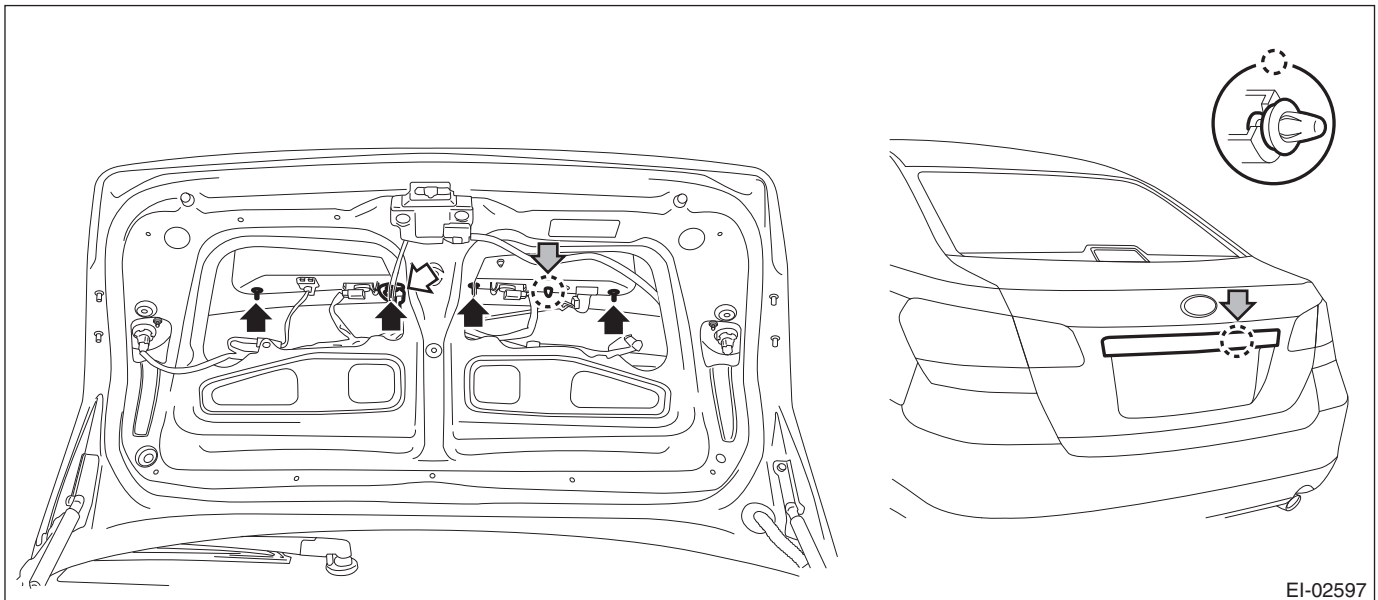

### B: INSTALLATION

Install each part in the reverse order of removal.

**Tightening torque:**

**4.5 N·m (0.46 kgf-m, 3.3 ft-lb)**