


## 32.Heat Shield Cover

### A: REMOVAL



#### 1. FRONT HEAT SHIELD COVER

- 1) Remove the center exhaust pipe.
  - Turbo model <Ref. to EX(H4DOTC)-15, REMOVAL, Rear Exhaust Pipe.>
  - Non-turbo model <Ref. to EX(H4SO)-8, REMOVAL, Rear Exhaust Pipe.>
  - H6 model <Ref. to EX(H6DO)-8, REMOVAL, Rear Exhaust Pipe.>
- 2) Remove the four bolts to remove the front heat shield cover.

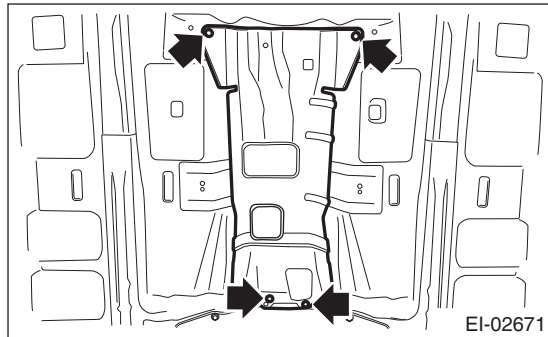


#### 2. CENTER HEAT SHIELD COVER

- 1) Remove the rear exhaust pipe.
  - Turbo model <Ref. to EX(H4DOTC)-15, REMOVAL, Rear Exhaust Pipe.>
  - Non-turbo model <Ref. to EX(H4SO)-8, REMOVAL, Rear Exhaust Pipe.>
  - H6 model <Ref. to EX(H6DO)-8, REMOVAL, Rear Exhaust Pipe.>
- 2) Remove the propeller shaft. (Turbo model only) <Ref. to DS-10, REMOVAL, Propeller Shaft.>
- 3) Remove the bolt (A), nuts (B), and clip (C), and remove the center heat shield cover.

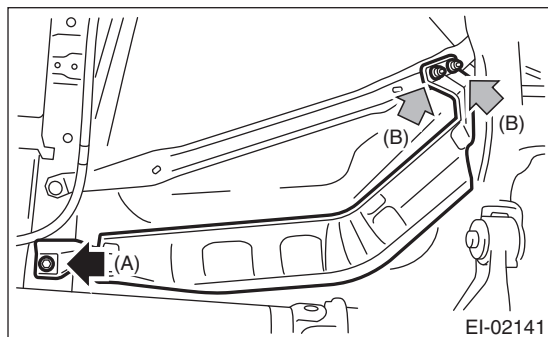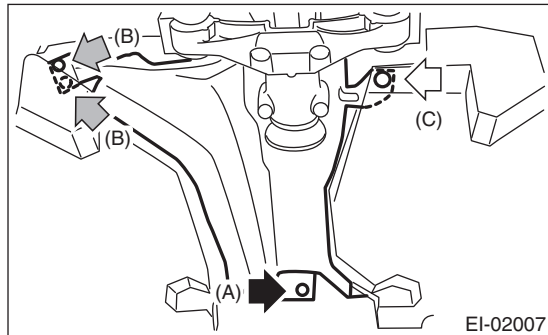

## 3. REAR HEAT SHIELD COVER

- 1) Remove the muffler.
  - Turbo model <Ref. to EX(H4DOTC)-16, REMOVAL, Muffler.>
  - Non-turbo model <Ref. to EX(H4SO)-9, REMOVAL, Muffler.>
  - H6 model <Ref. to EX(H6DO)-9, REMOVAL, Muffler.>
- 2) Remove the bolts, and remove the rear heat shield cover.

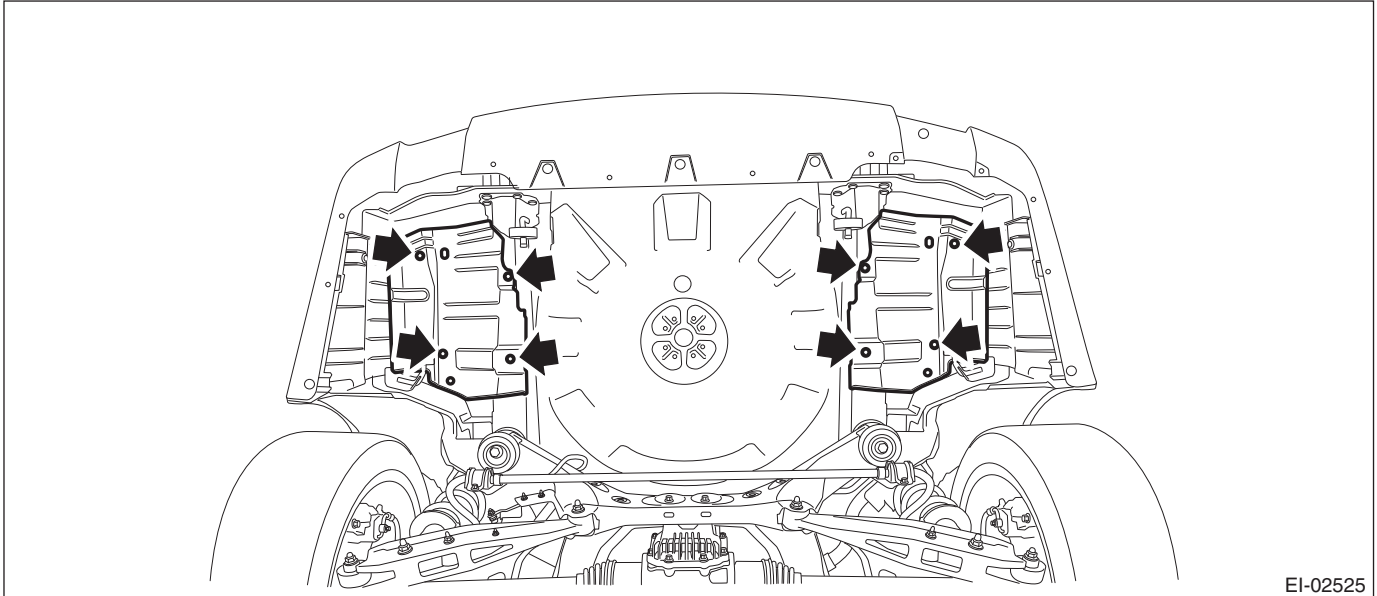

EI-02525

## B: INSTALLATION

Install each part in the reverse order of removal.

### *Tightening torque:*

*Refer to "COMPONENT" of "General Description". <Ref. to EI-25, HEAT SHIELD COVER, COMPONENT, General Description.>*