


7. Fuel Tank Protector

A: REMOVAL

- 1) Lift up the vehicle.
- 2) Remove the fuel tank protector.
 - (1) Remove the bolt and nuts and remove the fuel tank protector.
 - (2) Remove the clip.

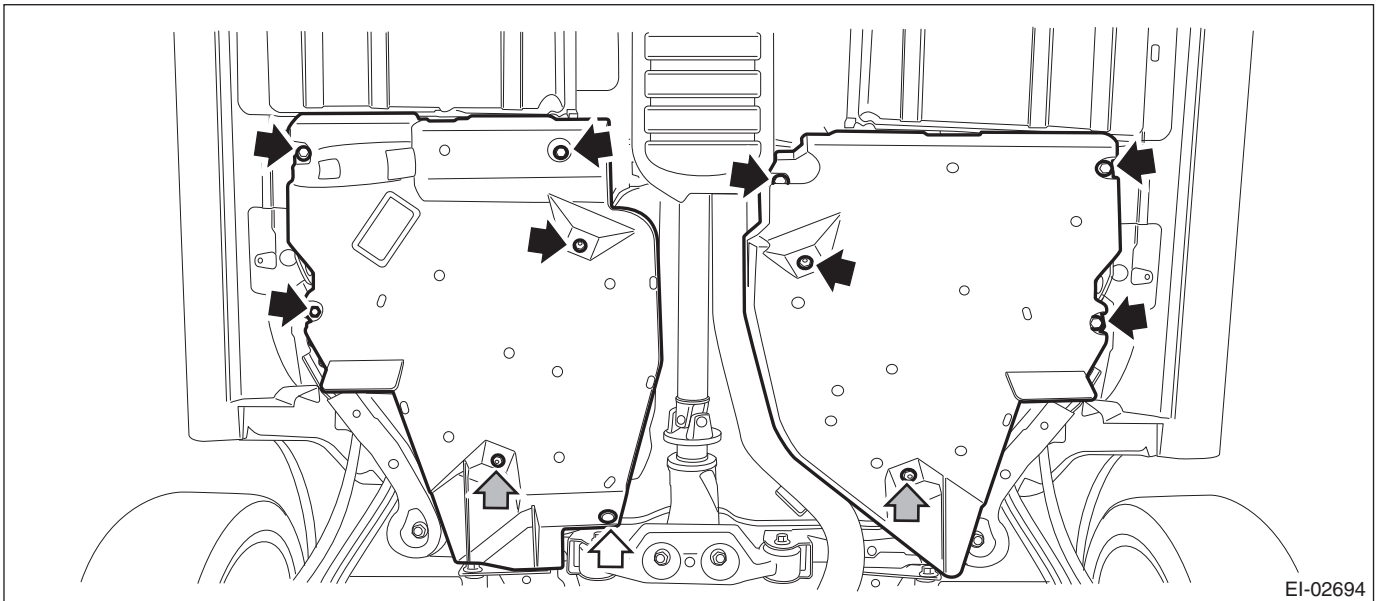

EI-02694

B: INSTALLATION

Install each part in the reverse order of removal.

CAUTION:

Do not reuse the nut (self-locking nuts). Always replace them with new ones.

Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to EI-3, FUEL TANK PROTECTOR, COMPONENT, General Description.>