


Relay and Fuse

CRUISE CONTROL SYSTEM

2. Relay and Fuse

A: LOCATION

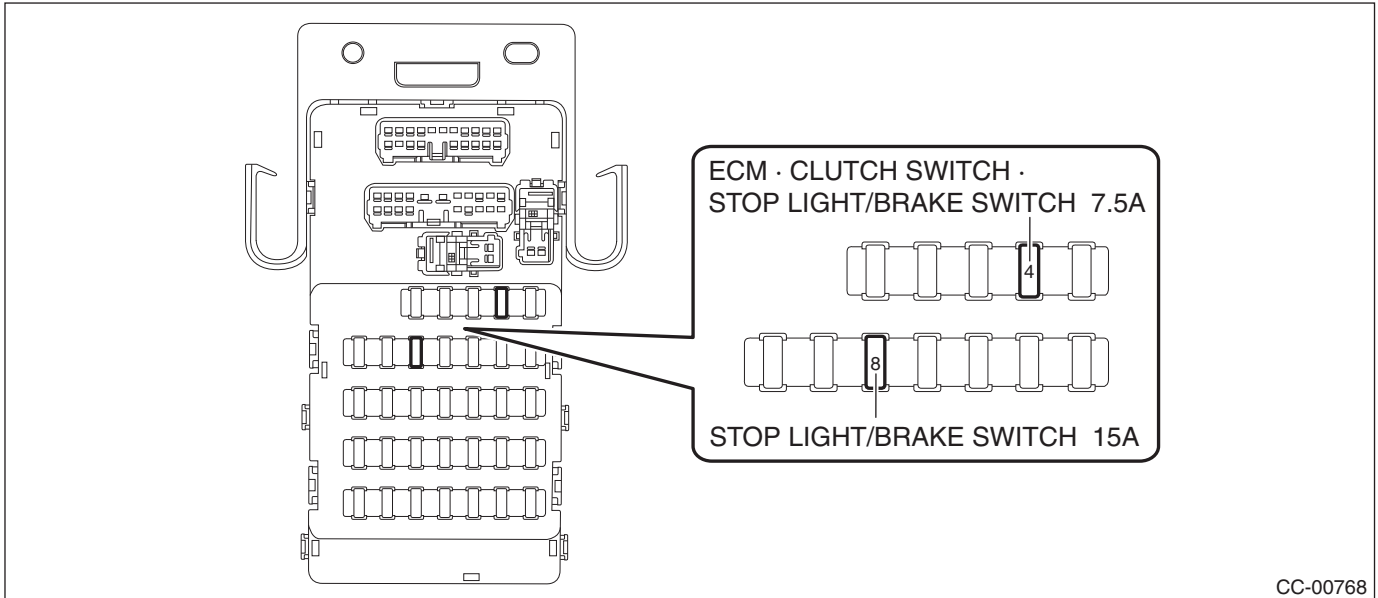

CC-00768

B: INSPECTION

1. CHECK FUSE.

- 1) Remove the fuse and check visually.
- 2) If the fuse is blown out, replace the fuse.