

Cruise Control Module

CRUISE CONTROL SYSTEM

4. Cruise Control Module

A: NOTE

The control of cruise control system is carried out in engine control module (ECM).

B: REMOVAL

- H4 NA model:<Ref. to FU(H4SO)-39, REMOVAL, Engine Control Module (ECM).>
- H4 turbo model:<Ref. to FU(H4DOTC)-57, REMOVAL, Engine Control Module (ECM).>
- H6 model:<Ref. to FU(H6DO)-50, REMOVAL, Engine Control Module (ECM).>

C: INSTALLATION

- H4 NA model:<Ref. to FU(H4SO)-39, INSTALLATION, Engine Control Module (ECM).>
- H4 turbo model:<Ref. to FU(H4DOTC)-57, INSTALLATION, Engine Control Module (ECM).>
- H6 model:<Ref. to FU(H6DO)-50, INSTALLATION, Engine Control Module (ECM).>