

## 22.Piston

### A: SPECIFICATION

Refer to "Cylinder Block" for removal and installation procedures of pistons. <Ref. to ME(H4DOTC)-80, REMOVAL, Cylinder Block.> <Ref. to ME(H4DOTC)-85, INSTALLATION, Cylinder Block.>