

Door Cord

WIRING SYSTEM

61. Door Cord

A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
D2	2	★	C-2		Front door speaker RH
D3	6	Dark gray	B-2		Front power window motor RH
D5	6	★	C-3		Outer mirror assembly LH (except for C6 model)
	10	★	C-4		Outer mirror assembly LH (C6 model)
D7	3	★	C-3		Power window main switch
D10	2	★	C-4		Door step light LH
D12	2	★	C-4		Front door speaker LH
D13	6	Dark gray	C-4		Front power window motor LH
D15	6	★	B-2		Outer mirror assembly RH (except for C6 model)
	10	★	B-2		Outer mirror assembly RH (C6 model)
D17	8	★	B-2		Front power window sub switch
D18	2	★	C-4		Front door lock actuator LH
D20	2	★	B-3		Door step light RH
D22	10	★	C-4	R10	Rear wiring harness LH
D23	2	★	C-4		Rear door speaker LH
D24	6	Dark gray	B-4		Rear power window motor LH
D25	8	★	B-4		Rear power window sub switch LH
D26	2	★	B-5		Rear door lock actuator LH
D28	10	★	B-3	R13	Rear wiring harness RH
D29	2	★	B-3		Rear door speaker RH
D30	6	Dark gray	B-3		Rear power window motor RH
D31	8	★	B-3		Rear power window sub switch RH
D32	2	★	B-3		Rear door lock actuator RH
D72	2	★	B-3		Front door lock actuator RH
D83	28	★	B-2	i76	Instrument panel wiring harness
D84	28	★	C-3	i101	
D95	16	★	C-3		Power window main switch
D125	5	★	B-2		Passenger's door lock switch
D144	12	★	C-2	D146	Adapter cord (power window sub switch)
D145	20	★	C-3	D147	Adapter cord (power window main switch)
D146	12	★	C-2	D144	Front door cord RH
D147	20	★	C-3	D145	Front door cord LH

★ : White or natural color

