

Remote Engine Start System

WIRING SYSTEM




 


44. Remote Engine Start System

A: WIRING DIAGRAM

1. WITHOUT PUSH BUTTON START

RE/GS-01


RE/GS-01

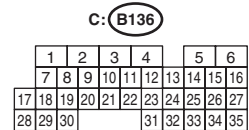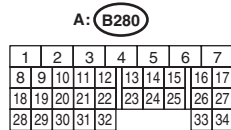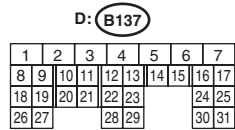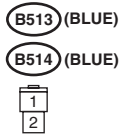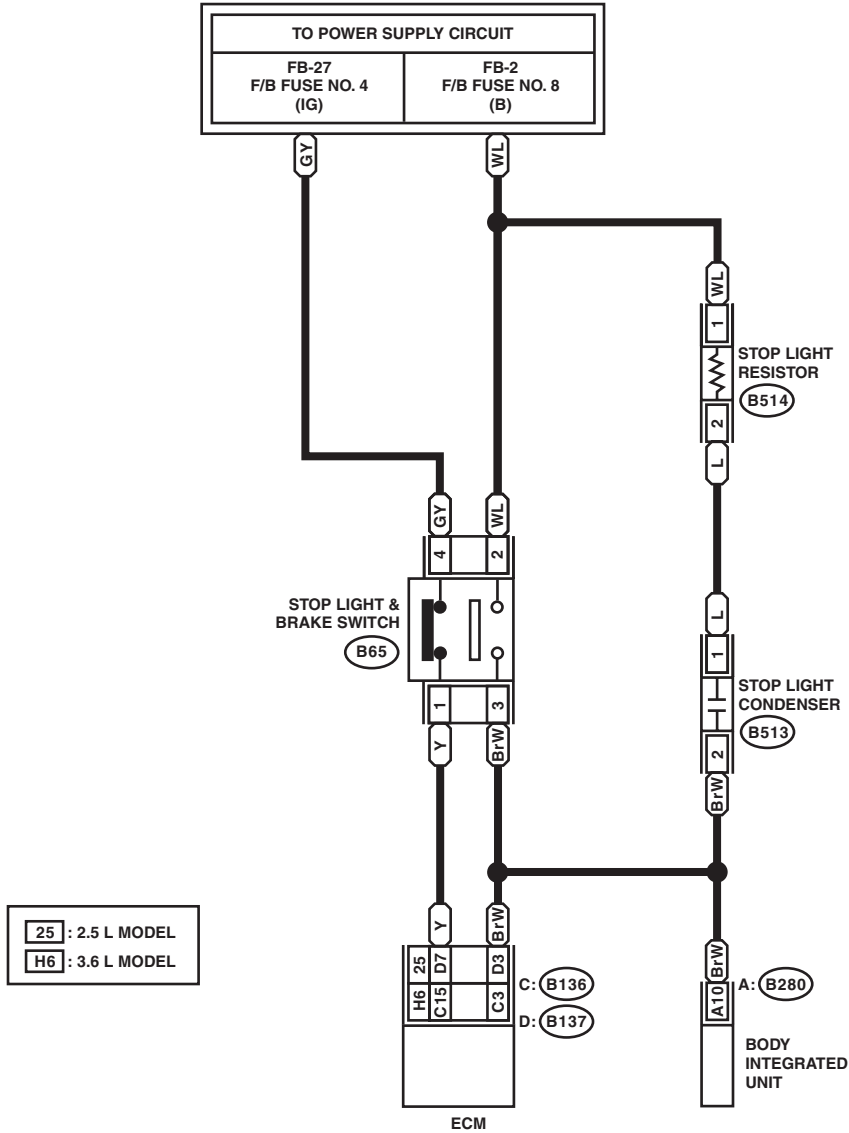

WI-36333

Remote Engine Start System


WIRING SYSTEM

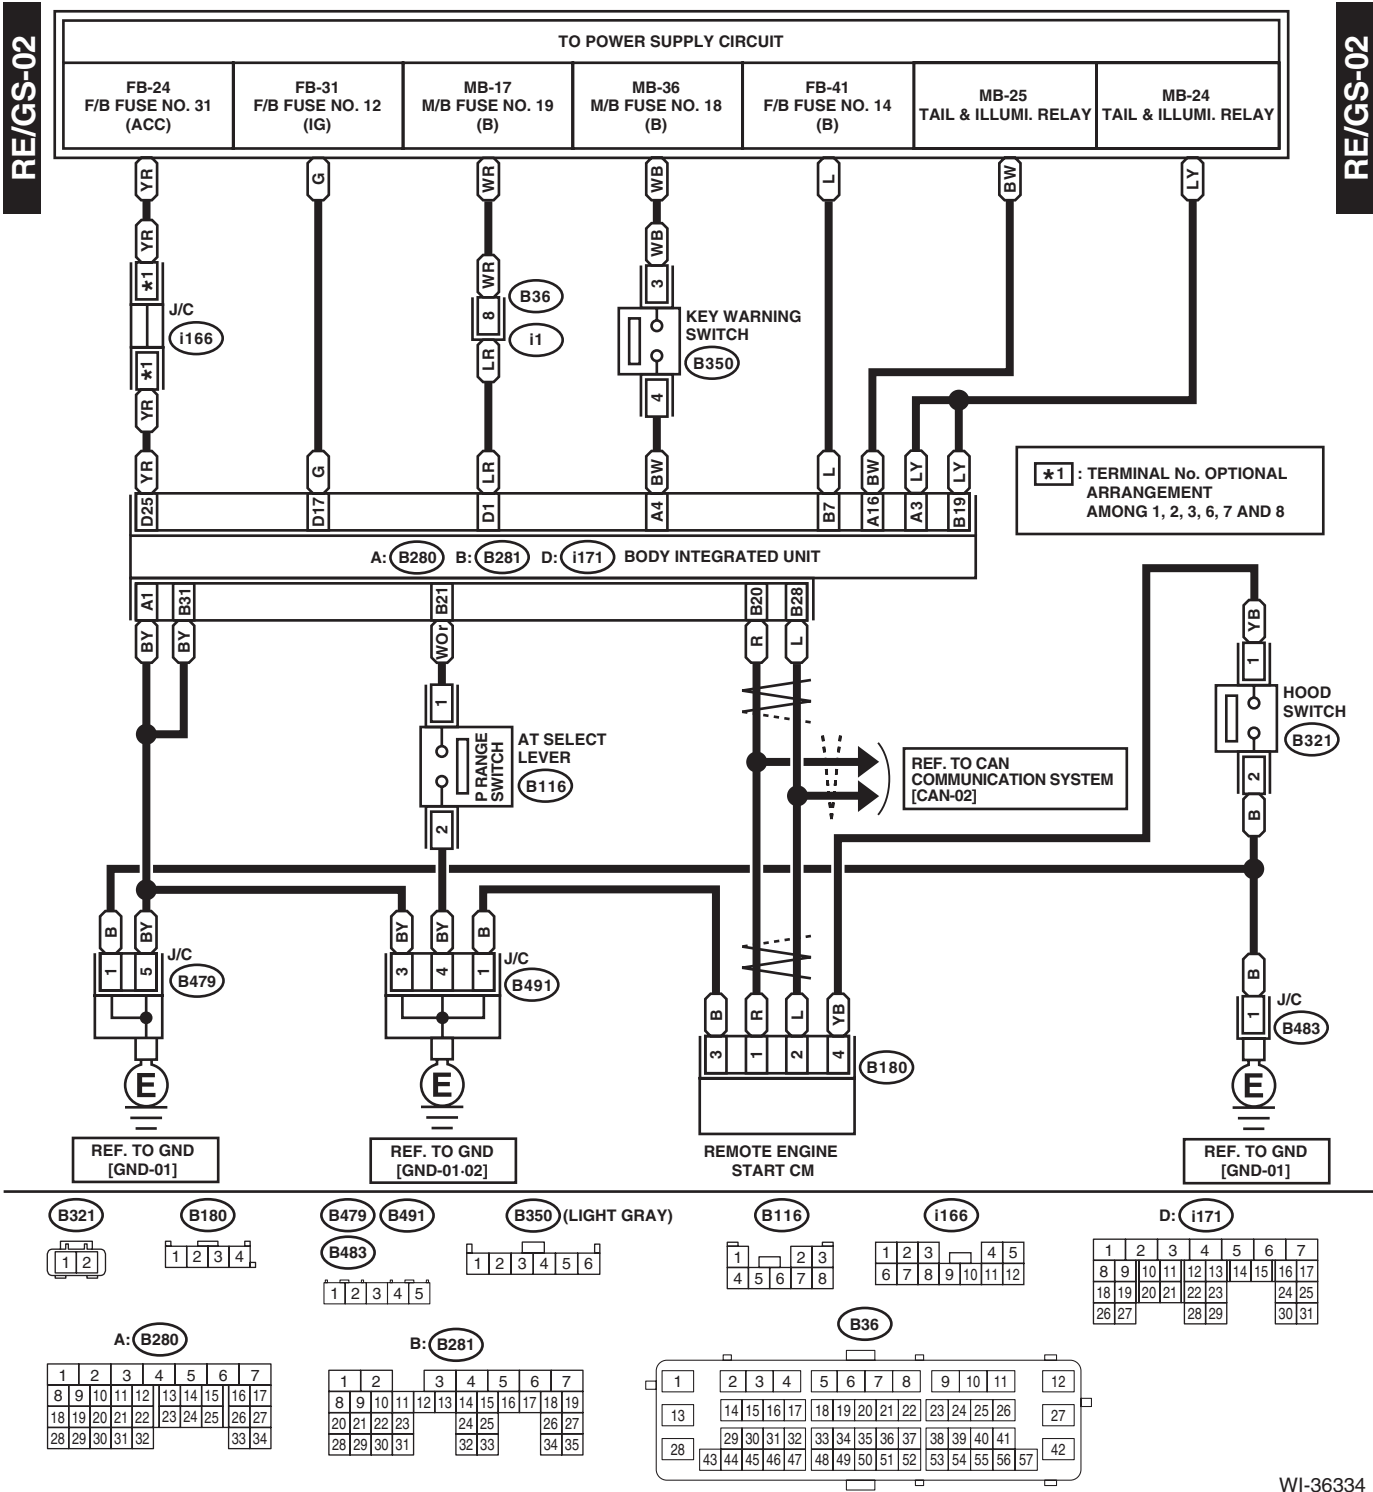


WI-36334

Remote Engine Start System

WIRING SYSTEM

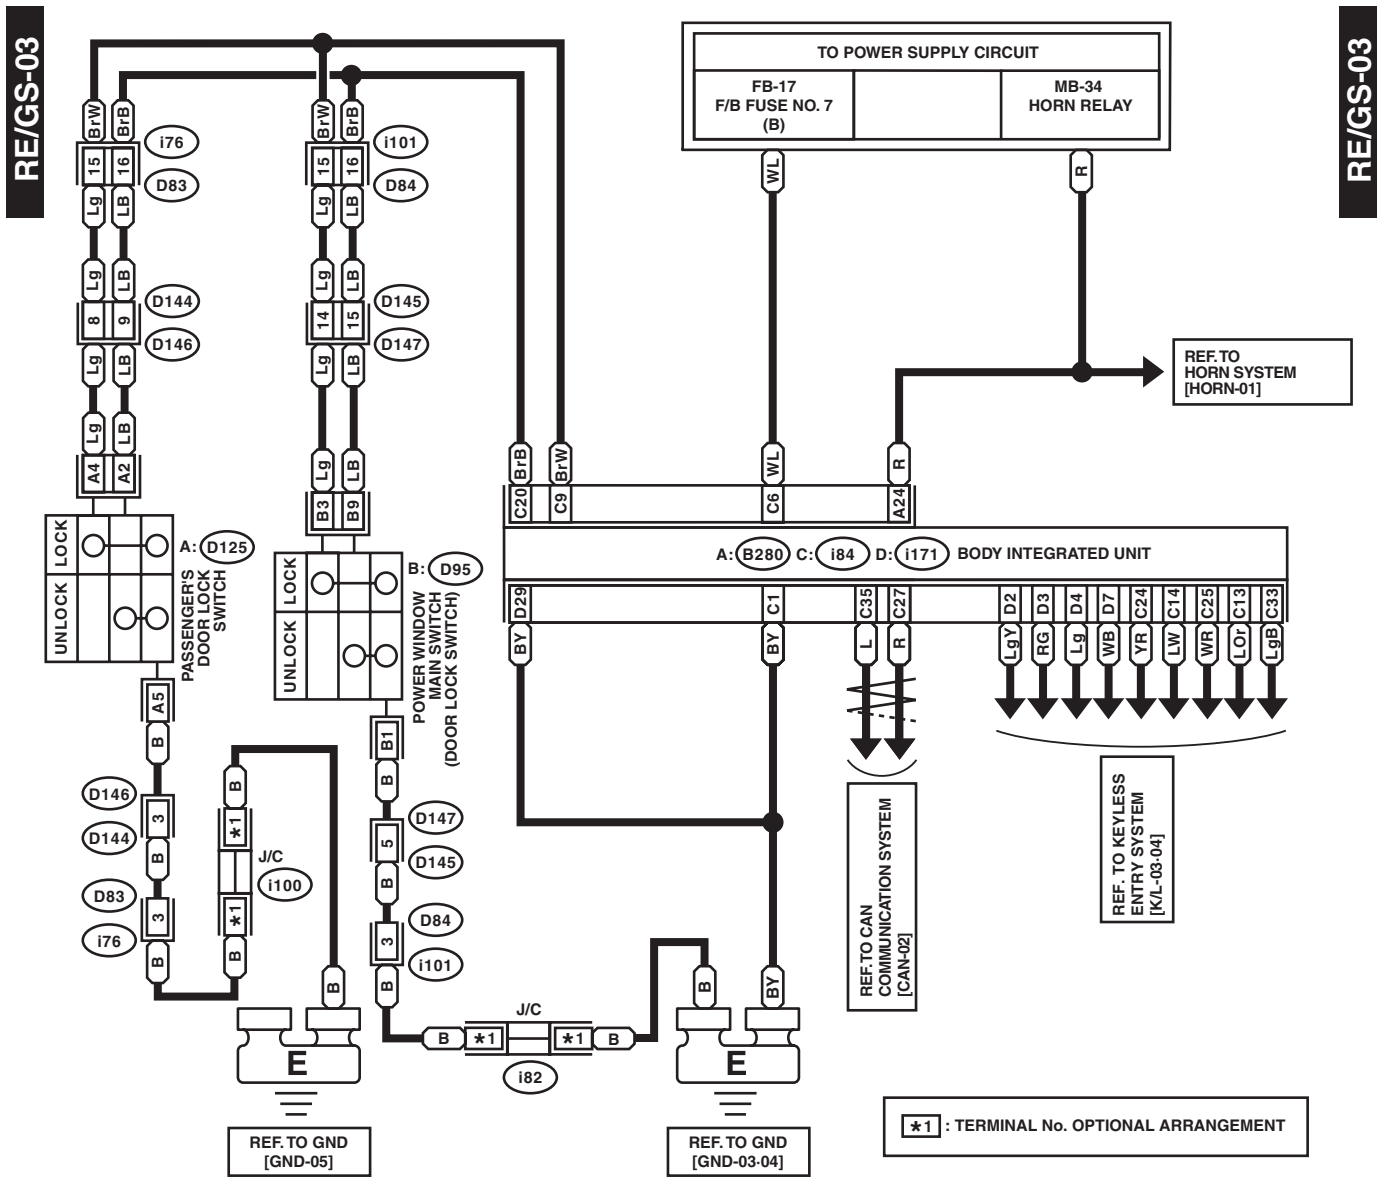

RE/GS-03

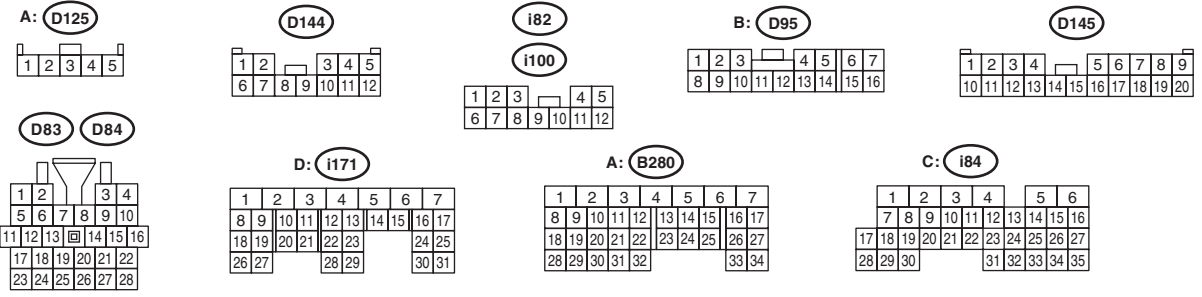

WI-36335



Remote Engine Start System

WIRING SYSTEM

2. WITH PUSH BUTTON START

RE/GS(P)-01


RE/GS(P)-01

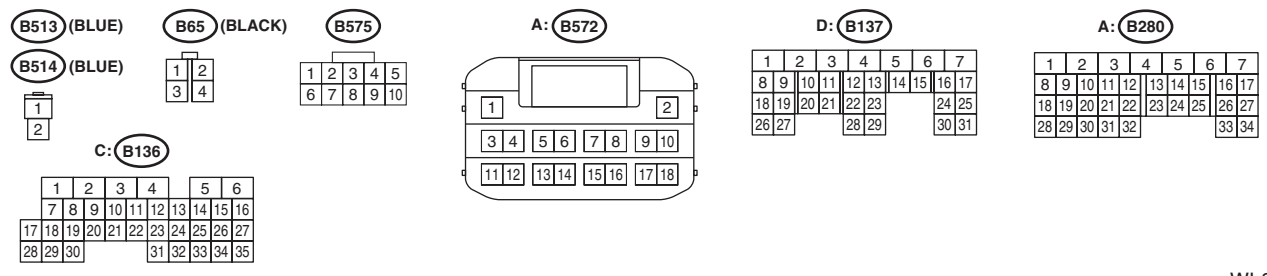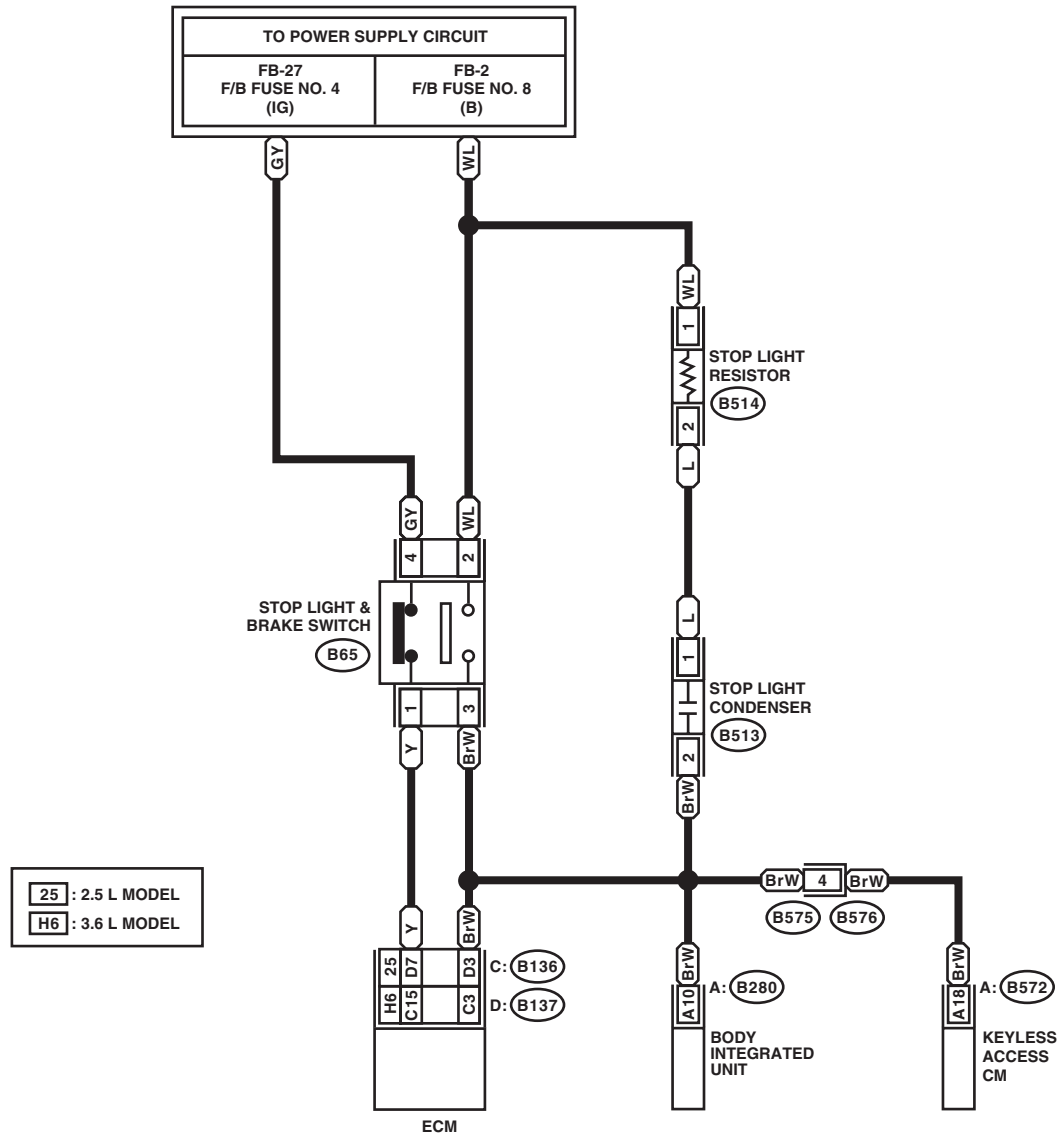

WI-36336

Remote Engine Start System


WIRING SYSTEM

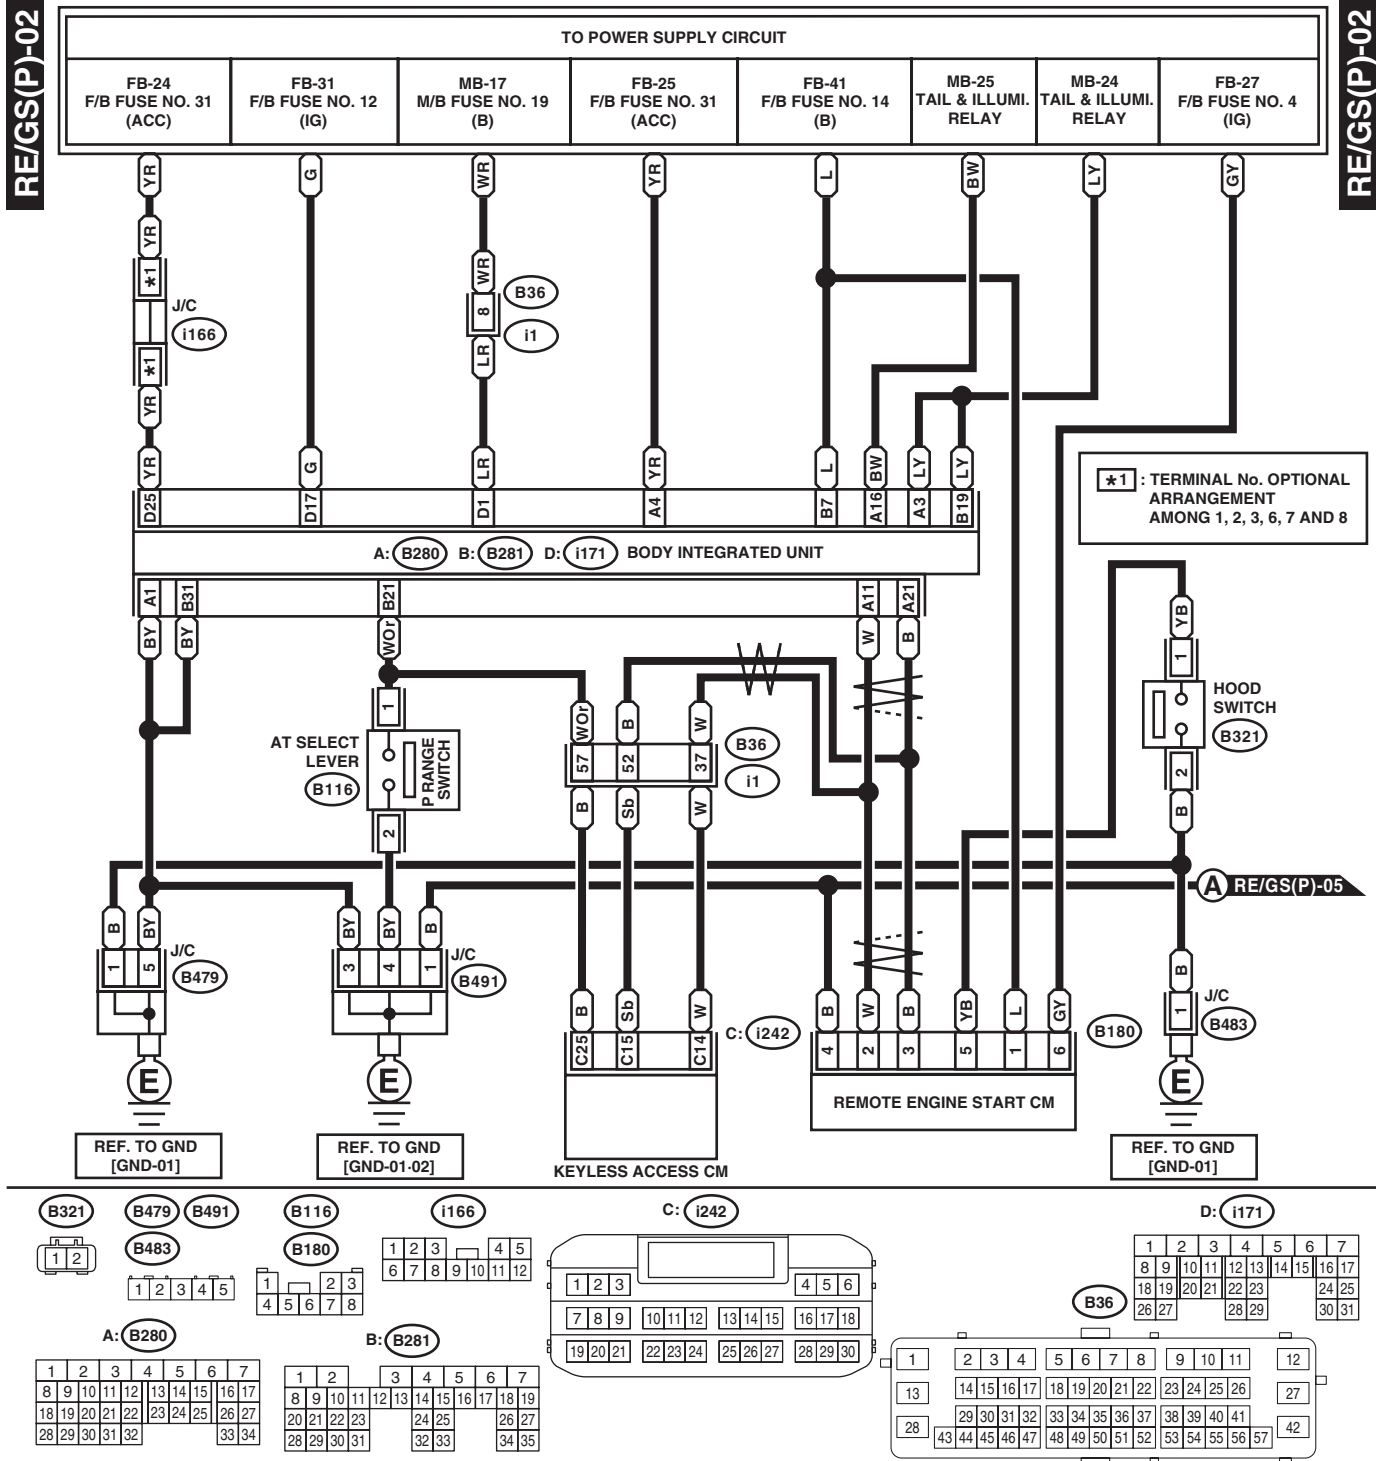

WI-36337









Remote Engine Start System

WIRING SYSTEM

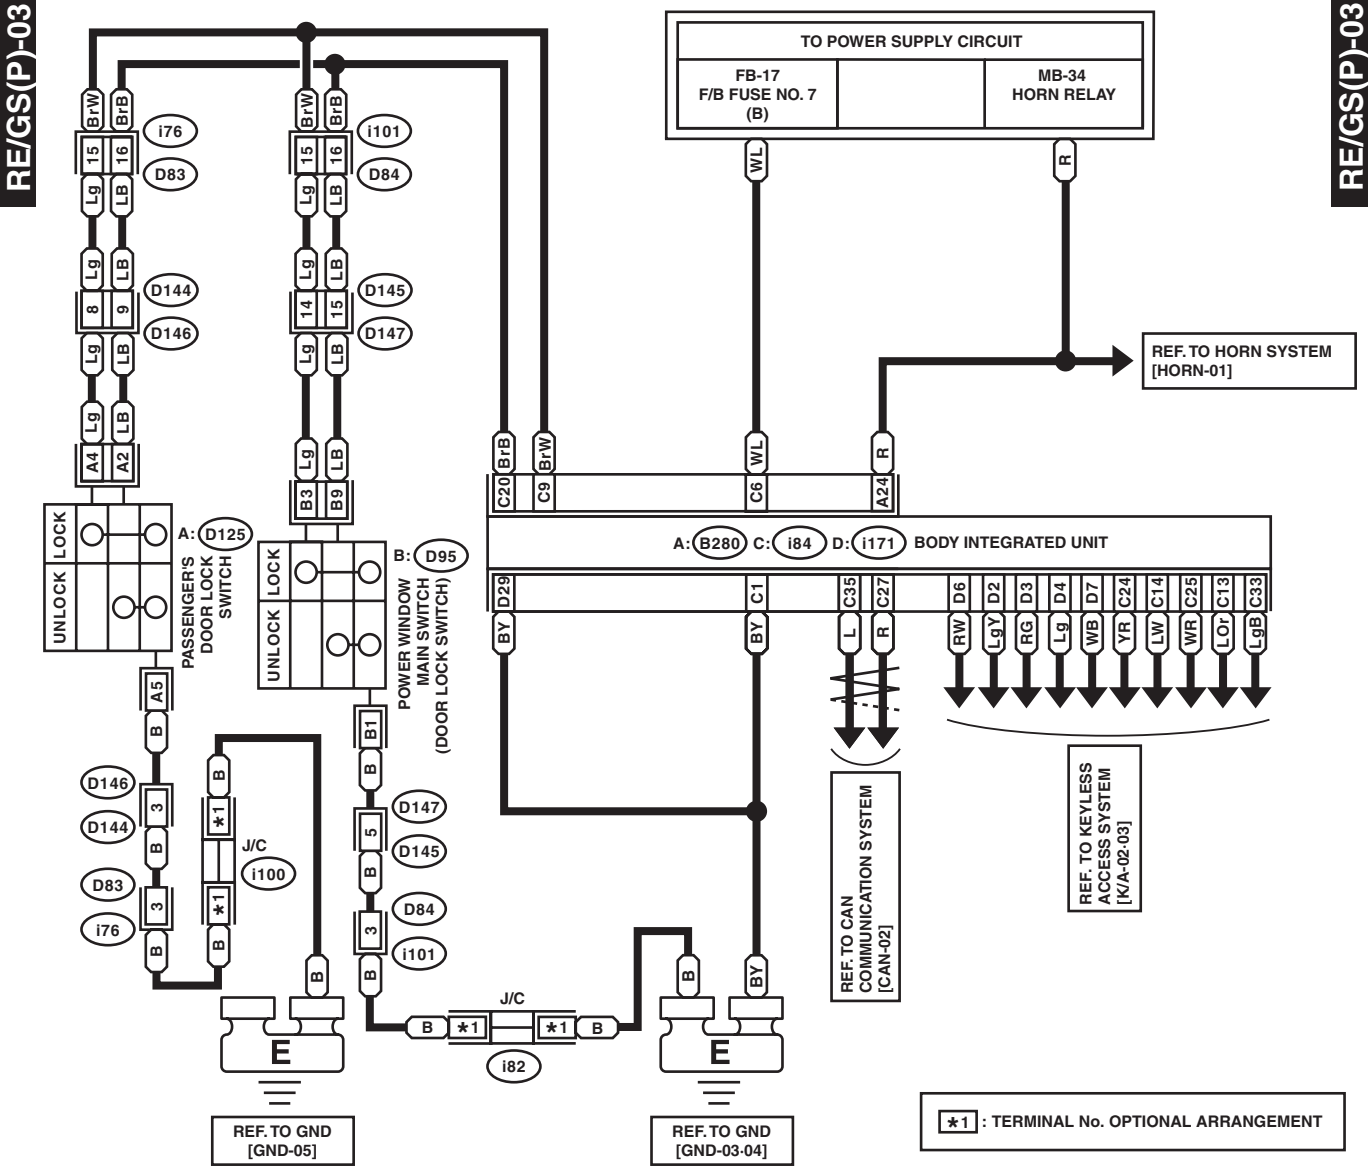

RE/GS(P)-03

   RE/GS(P)-03

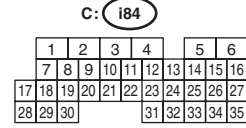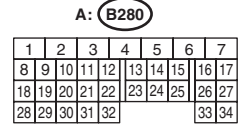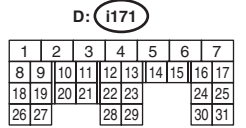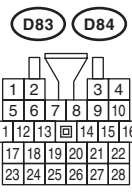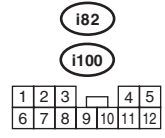



WI-36338

Remote Engine Start System

WIRING SYSTEM

RE/GS(P)-04

RE/GS(P)-04

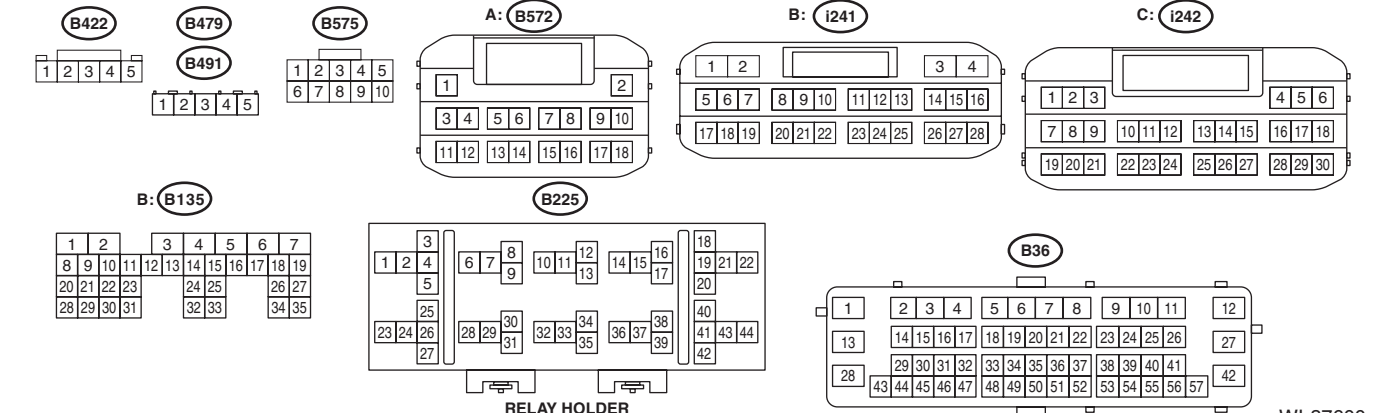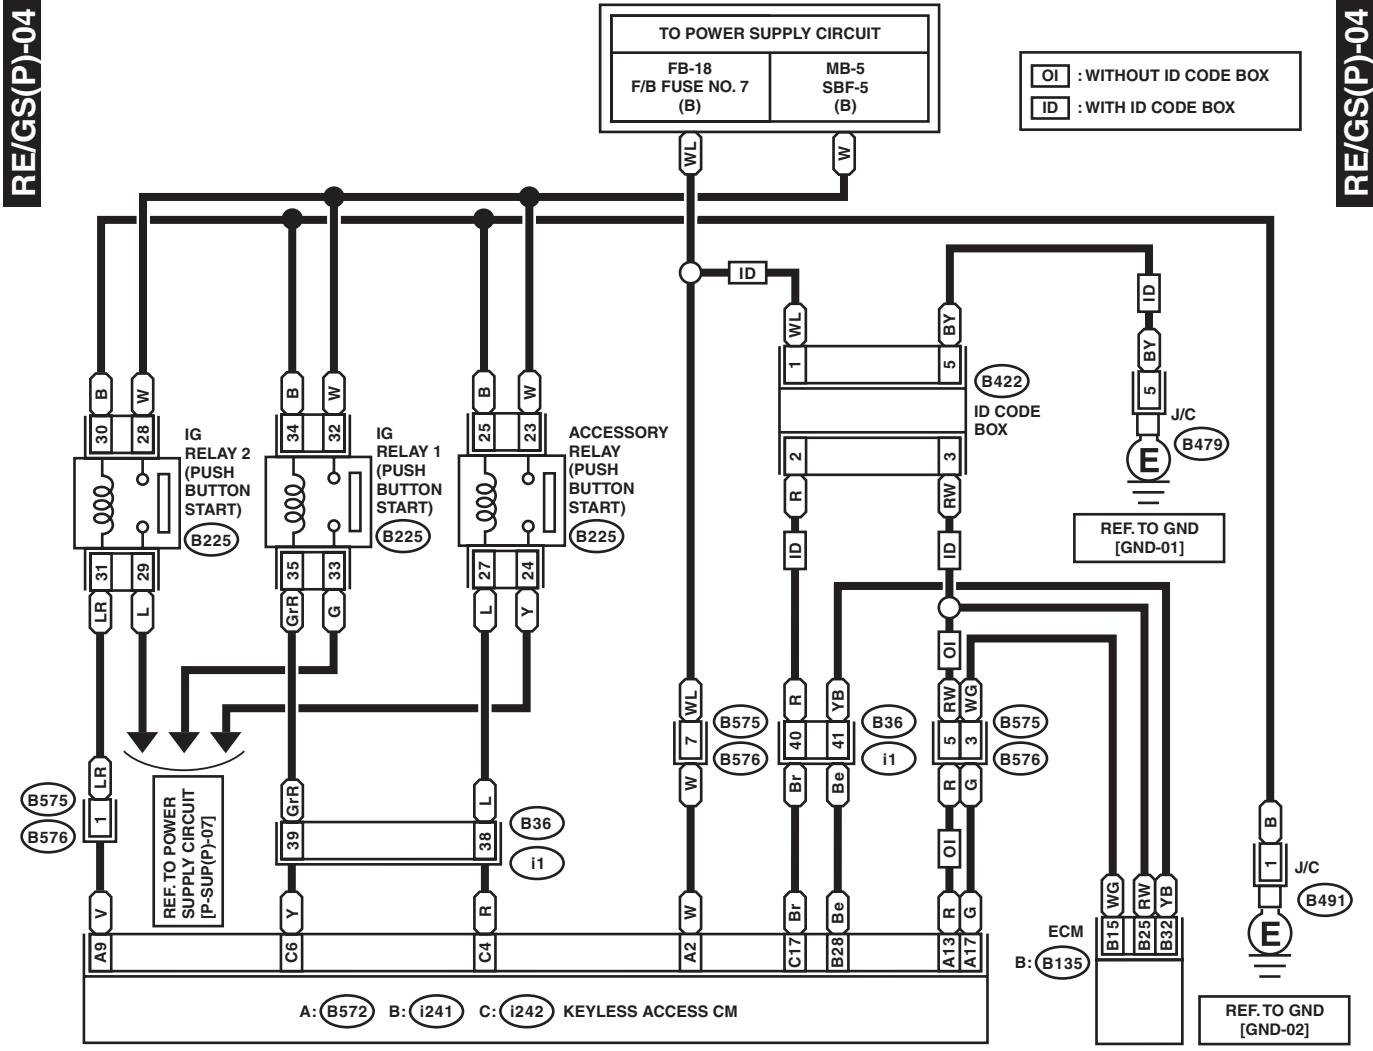



WI-37600

Remote Engine Start System

WIRING SYSTEM

RE/GS(P)-05

RE/GS(P)-05

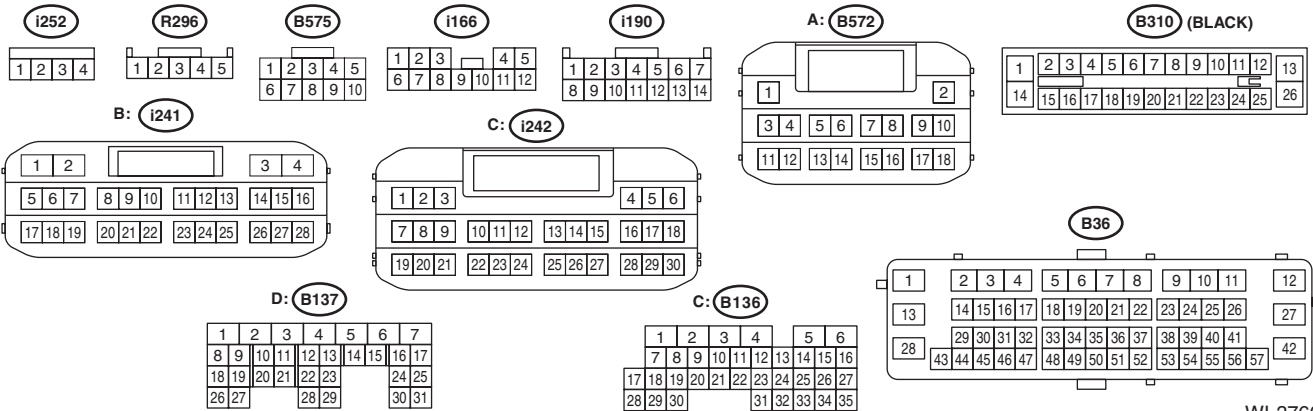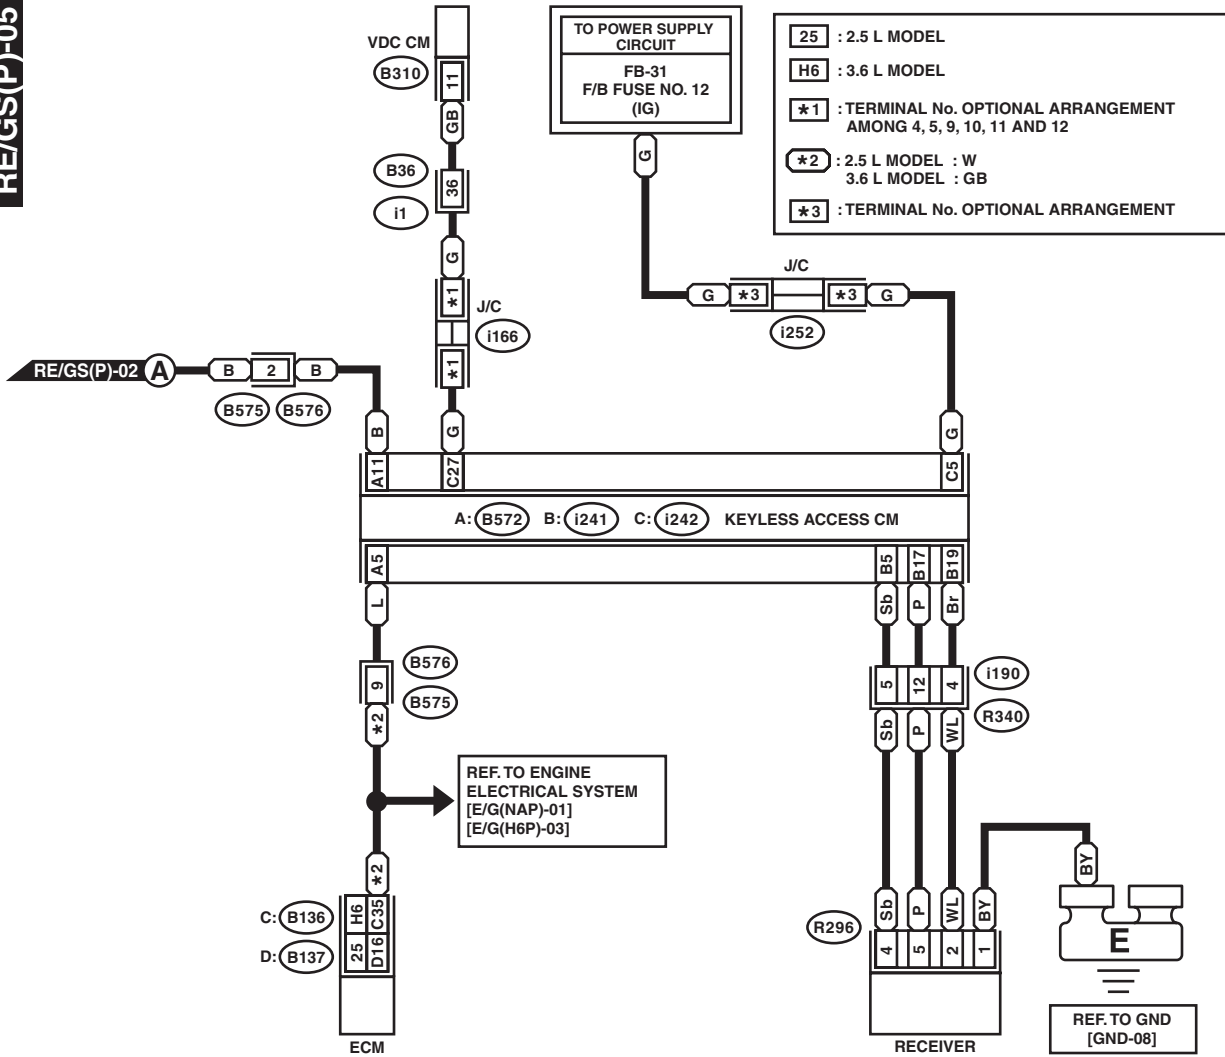

WI-37601