

## **15.CVTF**

### **A: INSPECTION**

Refer to “CVT” section for CVTF inspection. <Ref. to CVT-36, INSPECTION, CVTF.>

### **B: REPLACEMENT**

Refer to “CVT” section for CVTF replacement. <Ref. to CVT-37, REPLACEMENT, CVTF.>