

## 16. Front & Rear Differential Gear Oil

### A: INSPECTION

#### 1. FRONT DIFFERENTIAL (MT MODEL)

Front differential gear oil of MT model lubricates the transmission and differential together. Refer to "Transmission Gear Oil" for replacement procedure. <Ref. to 6MT-24, INSPECTION, Transmission Gear Oil.>

#### 2. FRONT DIFFERENTIAL (AT MODEL)

Refer to "5AT" section for inspection of AT model front differential gear oil. <Ref. to 5AT-30, INSPECTION, Differential Gear Oil.>

#### 3. FRONT DIFFERENTIAL (CVT MODEL)

Refer to "CVT" section for inspection of CVT model front differential gear oil. <Ref. to CVT-40, INSPECTION, Differential Gear Oil.>

#### 4. REAR DIFFERENTIAL

Refer to "DI" section for rear differential gear oil inspection. <Ref. to DI-22, INSPECTION, Differential Gear Oil.>

### B: REPLACEMENT

#### 1. FRONT DIFFERENTIAL (MT MODEL)

Front differential gear oil of MT model lubricates the transmission and differential together. Refer to "6MT" section for replacement procedure. <Ref. to 6MT-24, REPLACEMENT, Transmission Gear Oil.>

#### 2. FRONT DIFFERENTIAL (AT MODEL)

Refer to "5AT" section for front differential gear oil replacement. <Ref. to 5AT-30, REPLACEMENT, Differential Gear Oil.>

#### 3. FRONT DIFFERENTIAL (CVT MODEL)

Refer to "CVT" section for front differential gear oil replacement. <Ref. to CVT-42, REPLACEMENT, Differential Gear Oil.>

#### 4. REAR DIFFERENTIAL

Refer to "DI" section for rear differential gear oil replacement. <Ref. to DI-22, REPLACEMENT, Differential Gear Oil.>