

Schedule

PERIODIC MAINTENANCE SERVICES

2. Schedule

A: MAINTENANCE SCHEDULE 1

1. MODEL WITH US SPECIFICATION

- Other than U5 model

		Maintenance interval [Number of months or km (miles), whichever occurs first]																	Remarks
Months		3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	
× 1,000 km		4.8	12	24	36	48	60	72	81.4	96	108	120	132	144	156	168	180	192	
× 1,000 miles		3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	
1	Engine oil	3.6 L (R)	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
		2.5 L		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
2	Engine oil filter	3.6 L (R)	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
		2.5 L		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
3	Spark plug									R								R	
4	Drive belt(s)					I				I					I			I	
5	Emission-related hoses					I				I					I			I	
6	PCV valve					I				I					I			I	
7	Fuel line					(I)				(I)					(I)			I	
8	Fuel filter									R								R	
9	Air cleaner element					R				R					R			R	
10	Cooling system					I				I					I			I	
11	Engine coolant	Replace after the first 11 years or 220,000 km (137,500 miles), and every six years or 120,000 km (75,000 miles) thereafter																	
12	Clutch system			I		I		I		I		I		I		I		I	
13	Transmission gear oil					I				I					I			I	
14	ATF					I				I					I			I	
15	CVTF					I				I					I			I	
16	Front & rear differential gear oil					I				I					I			I	
17	Brake line			I		I		I		I		I		I		I		I	
18	Brake fluid					R				R					R			R	
19	Disc brake pad and disc			I		I		I		I		I		I		I		I	
20	Parking brake			I		I		I		I		I		I		I		I	
21	Suspension			I		I		I		I		I		I		I		I	
22	Wheel bearing									(I)								(I)	
23	Axle boots and joints			I		I		I		I		I		I		I		I	
24	Tire rotation		P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	
25	Steering system (power steering)			I		I		I		I		I		I		I		I	
26	A/C filter	Replace every 15 months or 24,000 km (15,000 miles)																	

Symbols used:

R: Replace

I: Inspection

P: Perform

(R): Recommended service for maintaining better vehicle performance

(I): Inspections recommended for vehicle safety

Schedule

PERIODIC MAINTENANCE SERVICES

NOTE:

1. This inspection is not required to maintain emission warranty eligibility and it does not affect the manufacturer's obligations under EPA's in-use compliance program.
2. When the vehicle is used in extremely dusty conditions, the air cleaner element should be replaced more often.
3. A tire should be replaced when the tread wear indicator appears as a solid band across the tread. The indicators appear when the remaining tread has been worn to 1.6 mm (0.063 in) or less.
4. When the vehicle is used under extremely dusty conditions, replace the A/C filter frequently.

Schedule

PERIODIC MAINTENANCE SERVICES

- U5 model

		Maintenance interval [Number of months or km (miles), whichever occurs first]											Remarks	
Months		3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75		To be continued to the next table.
× 1,000 km		4.8	12	24	36	48	60	72	81.4	96	108	120		
× 1,000 miles		3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75		
1	Engine oil	3.6 L	(R)	R	R	R	R	R	R	R	R	R		
		2.5 L		R	R	R	R	R	R	R	R	R		
2	Engine oil filter	3.6 L	(R)	R	R	R	R	R	R	R	R	R		
		2.5 L		R	R	R	R	R	R	R	R	R		
3	Spark plug									R				
4	Drive belt(s)					I				I				
5	Emission-related hoses					I				I				
6	PCV valve					I				I				
7	Fuel line					(I)				(I)			Note 1.	
8	Fuel filter									R			Note 1.	
9	Air cleaner element					R				R			Note 2.	
10	Cooling system					I				I				
11	Engine coolant	Replace after the first 11 years or 220,000 km (137,500 miles), and every six years or 120,000 km (75,000 miles) thereafter												
12	Clutch system			I		I		I		I		I		
13	Transmission gear oil					I				I				
14	ATF					I				I				
15	CVTF					I				I				
16	Front & rear differential gear oil					I				I				
17	Brake line			I		I		I		I		I		
18	Brake fluid					R				R				
19	Disc brake pad and disc			I		I		I		I		I		
20	Parking brake			I		I		I		I		I		
21	Suspension			I		I		I		I		I		
22	Wheel bearing									(I)				
23	Axle boots and joints			I		I		I		I		I		
24	Tire rotation		P	P	P	P	P	P	P	P	P	P	Note 3.	
25	Steering system (power steering)			I		I		I		I		I		
26	A/C filter	Replace every 15 months or 24,000 km (15,000 miles)											Note 4.	

Symbols used:

R: Replace

I: Inspection

P: Perform

(R): Recommended service for maintaining better vehicle performance

(I): Inspections recommended for vehicle safety

NOTE:

1. This inspection is not required to maintain emission warranty eligibility and it does not affect the manufacturer's obligations under EPA's in-use compliance program.

2. When the vehicle is used in extremely dusty conditions, the air cleaner element should be replaced more often.

3. A tire should be replaced when the tread wear indicator appears as a solid band across the tread. The indicators appear when the remaining tread has been worn to 1.6 mm (0.063 in) or less.

4. When the vehicle is used under extremely dusty conditions, replace the A/C filter frequently.

Schedule

PERIODIC MAINTENANCE SERVICES

		Maintenance interval [Number of months or km (miles), whichever occurs first]											Remarks
	Months	Continued from previous table	82.5	90	97.5	105	112.5	120	127.5	135	142.5	150	
	× 1,000 km		132	144	156	168	180	192	204	216	228	240	
	× 1,000 miles		82.5	90	97.5	105	112.5	120	127.5	135	142.5	150	
1	Engine oil		R	R	R	R	R	R	R	R	R	R	
2	Engine oil filter		R	R	R	R	R	R	R	R	R	R	
3	Spark plug							R					
4	Drive belt(s)			I				I				I	
5	Emission-related hoses			I				I					
6	PCV valve			I				I					
7	Fuel line			(I)				I				(I)	Note 1.
8	Fuel filter							R					Note 1.
9	Air cleaner element			R				R				R	Note 2.
10	Cooling system			I				I				I	
11	Engine coolant	Replace after the first 11 years or 220,000 km (137,500 miles), and every six years or 120,000 km (75,000 miles) thereafter											
12	Clutch system			I		I		I				I	
13	Transmission gear oil			I				I				I	
14	ATF			I				I				I	
15	CVTF			I				I				I	
16	Front & rear differential gear oil			I				I				I	
17	Brake line			I		I		I		I		I	
18	Brake fluid			R				R				R	
19	Disc brake pad and disc			I		I		I		I		I	
20	Parking brake			I		I		I		I		I	
21	Suspension			I		I		I		I		I	
22	Wheel bearing							(I)				(I)	
23	Axle boots and joints			I		I		I		I		I	
24	Tire rotation		I	I	I	I	I	I	I	I	I	I	Note 3.
25	Steering system (power steering)			I		I		I		I		I	
26	A/C filter	Replace every 15 months or 24,000 km (15,000 miles)											Note 4.

Symbols used:

R: Replace

I: Inspection

(I): Inspections recommended for vehicle safety

NOTE:

1. This inspection is not required to maintain emission warranty eligibility and it does not affect the manufacturer's obligations under EPA's in-use compliance program.
2. When the vehicle is used in extremely dusty conditions, the air cleaner element should be replaced more often.
3. A tire should be replaced when the tread wear indicator appears as a solid band across the tread. The indicators appear when the remaining tread has been worn to 1.6 mm (0.063 in) or less.
4. When the vehicle is used under extremely dusty conditions, replace the A/C filter frequently.

Schedule

PERIODIC MAINTENANCE SERVICES

B: MAINTENANCE SCHEDULE 2

Item	Maintenance interval	Repeat short distance drive	Repeat rough/muddy road drive	Extremely cold weather area	Salt or other corrosive used or coastal area	High humidity or mountain area	Repeat towing trailer
Engine oil	3.75 months	R		R			R
	6,000 km						
	3,750 miles						
Engine oil filter	3.75 months	R		R			R
	6,000 km						
	3,750 miles						
Fuel filter	15 months				I		
	24,000 km						
	15,000 miles						
Fuel line	7.5 months				I		
	12,000 km						
	7,500 miles						
Transmission gear oil	15 months						R
	24,000 km						
	15,000 miles						
ATF	15 months						R
	24,000 km						
	15,000 miles						
CVTF	40,000 km						R
	24,855 miles						
Front and rear differential gear oil	15 months						R
	24,000 km						
	15,000 miles						
Brake line	7.5 months				I		
	12,000 km						
	7,500 miles						
Brake fluid	15 months					R	
	24,000 km						
	15,000 miles						
Disc brake pad and disc	7.5 months	I	I		I		I
	12,000 km						
	7,500 miles						
Parking brake	7.5 months	I	I		I		I
	12,000 km						
	7,500 miles						
Suspension	7.5 months		I	I	I		
	12,000 km						
	7,500 miles						
Axle boots and joints	7.5 months	I	I	I	I		I
	12,000 km						
	7,500 miles						
Steering system (power steering)	7.5 months		I	I	I		
	12,000 km						
	7,500 miles						