

26.A/C Filter

A: REPLACEMENT

Refer to “AC” section for A/C filter replacement.
<Ref. to AC-108, REPLACEMENT, A/C Filter.>

ENGINE 1 SECTION

This service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.

This manual includes the procedures for maintenance, disassembling, reassembling, inspection and adjustment of components and diagnostics for guidance of experienced mechanics.

Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.

FUEL INJECTION (FUEL SYSTEMS) FU(H4DO)

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES) EC(H4DO)

INTAKE (INDUCTION) IN(H4DO)

MECHANICAL ME(H4DO)

EXHAUST EX(H4DO)

COOLING CO(H4DO)

LUBRICATION LU(H4DO)

SPEED CONTROL SYSTEMS SP(H4DO)

IGNITION IG(H4DO)

STARTING/CHARGING SYSTEMS SC(H4DO)

ENGINE (DIAGNOSTICS) EN(H4DO)(diag)

GENERAL DESCRIPTION GD(H4DO)

FUEL INJECTION (FUEL SYSTEMS)

FU(H4DO)

	Page
1. General Description	2
2. Throttle Body	15
3. Intake Manifold	20
4. Engine Wiring Harness	42
5. Engine Coolant Temperature Sensor	49
6. Engine Oil Temperature Sensor	51
7. Crankshaft Position Sensor	53
8. Crankshaft Position Sensor Plate	58
9. Camshaft Position Sensor	59
10. Oil Control Solenoid	63
11. Knock Sensor	65
12. Throttle Position Sensor	69
13. Mass Air Flow and Intake Air Temperature Sensor	70
14. Manifold Absolute Pressure Sensor	73
15. EGR Control Valve	76
16. Fuel Injector	77
17. Tumble Generator Valve Assembly	84
18. Tumble Generator Valve Actuator	89
19. Front Oxygen (A/F) Sensor	91
20. Rear Oxygen Sensor	96
21. Engine Control Module (ECM)	101
22. Main Relay	103
23. Fuel Pump Relay	105
24. Electronic Throttle Control Relay	107
25. Fuel	109
26. Fuel Tank	112
27. Fuel Filler Pipe	133
28. Fuel Pump	139
29. Fuel Level Sensor	144
30. Fuel Sub Level Sensor	147
31. Fuel Filter	152
32. Fuel Delivery and Evaporation Lines	158
33. Fuel System Trouble in General	170