

4. Engine Oil Filter

A: REPLACEMENT

Refer to “LU” section for engine oil filter replacement. <Ref. to LU(H4DO)-25, Engine Oil Filter.>
<Ref. to LU(H6DO)-16, Engine Oil Filter.>