

6. V-belt

A: INSPECTION

Refer to "ME" section for V-belt inspection. <Ref. to ME(H4DO)-85, INSPECTION, V-belt.> <Ref. to ME(H6DO)-51, INSPECTION, V-belt.>

B: REPLACEMENT

Refer to "ME" section for V-belt replacement. <Ref. to ME(H4DO)-80, V-belt.> <Ref. to ME(H6DO)-51, V-belt.>