

8. Fuel Filter

A: REPLACEMENT

For fuel filter replacement procedure, refer to “FU” section. <Ref. to FU(H4DO)-152, Fuel Filter.>
<Ref. to FU(H6DO)-77, Fuel Filter.>

B: INSPECTION

Replace if the filter is clogged, or time for replacement has come.