



## 8. Radiator Main Fan and Fan Motor

### A: REMOVAL

- 1) Disconnect the ground cable from battery.

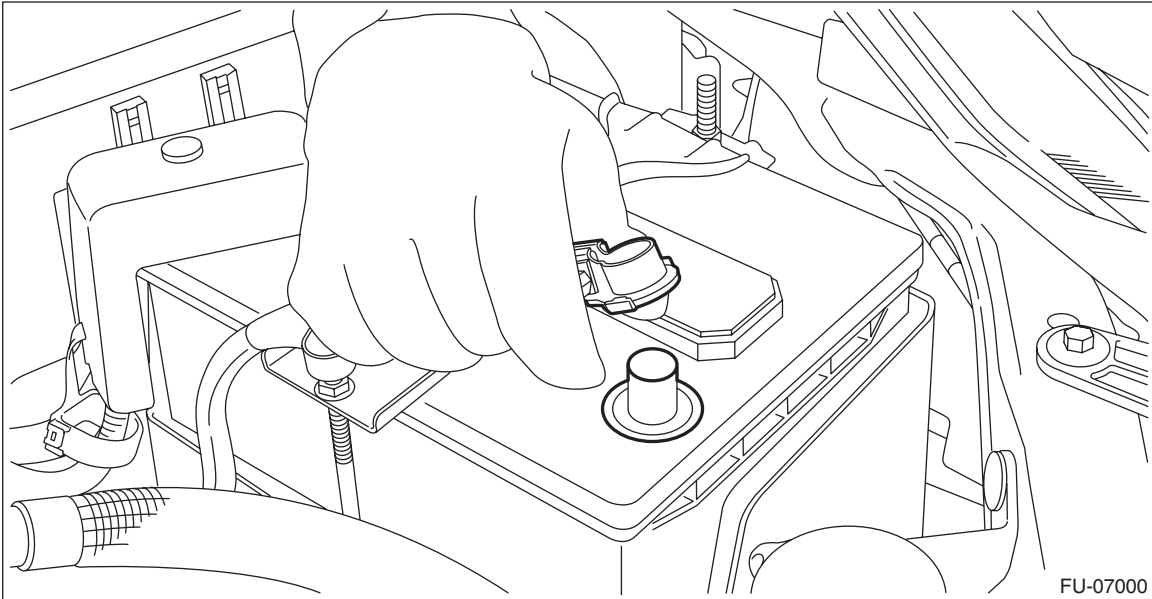

- 2) Remove the reservoir tank. <Ref. to CO(H4DO)-43, REMOVAL, Reservoir Tank.>
- 3) Disconnect the connector from the main fan motor assembly.

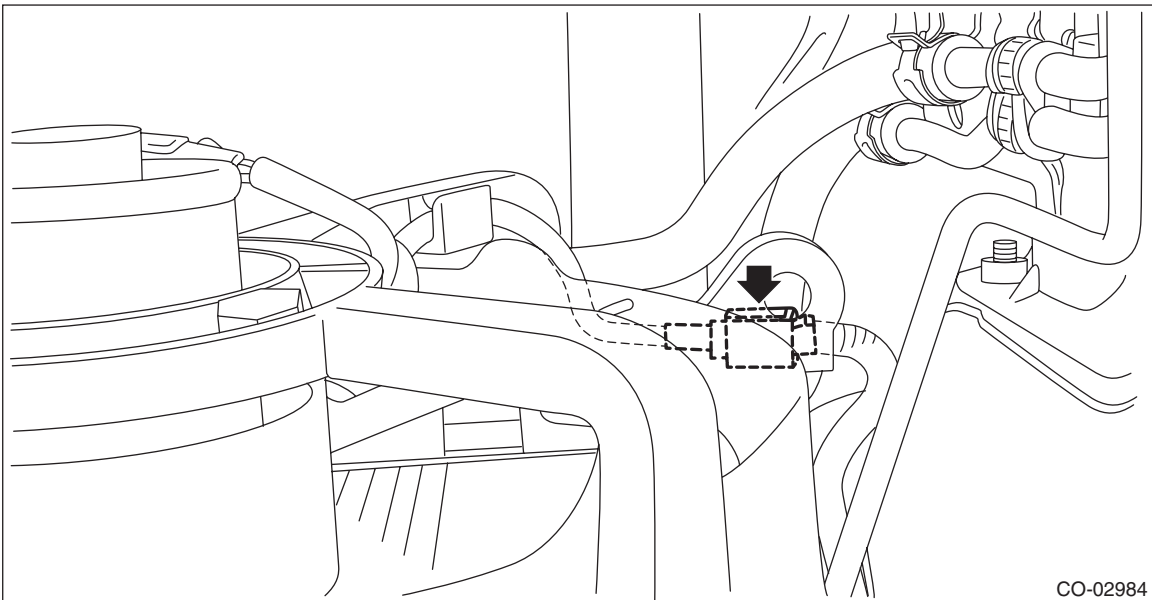


- 4) Remove the CVTF radiator hose from the clip of the radiator main fan shroud. (CVT model)

# Radiator Main Fan and Fan Motor

## COOLING

- 5) Remove the bolts which hold the radiator main fan shroud onto the radiator.

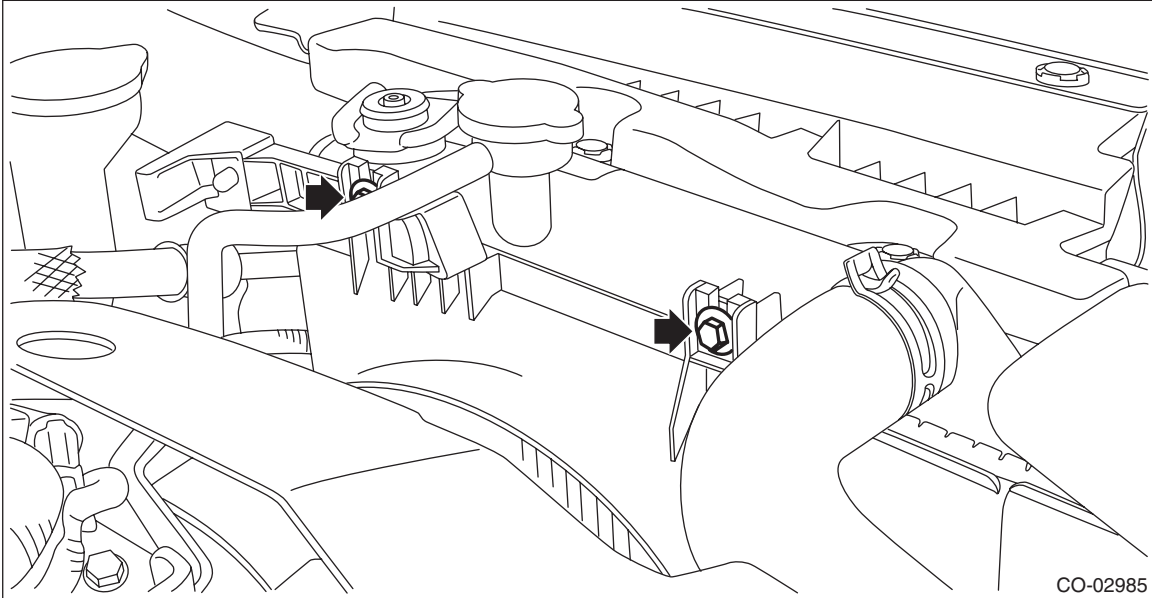

- 6) Remove the radiator main fan and fan motor from vehicle.

## B: INSTALLATION

Install in the reverse order of removal.

### NOTE:


If the installation of the radiator main fan and fan motor is difficult, attempt installation after loosening the bolts which hold the radiator sub fan shroud to the radiator.

### *Tightening torque:*

**7.5 N·m (0.8 kgf-m, 5.5 ft-lb)**

## C: DISASSEMBLY

- 1) Remove the clip which holds the main fan motor assembly connector onto the radiator main fan shroud.
- 2) Remove the main fan motor assembly from the radiator main fan shroud.

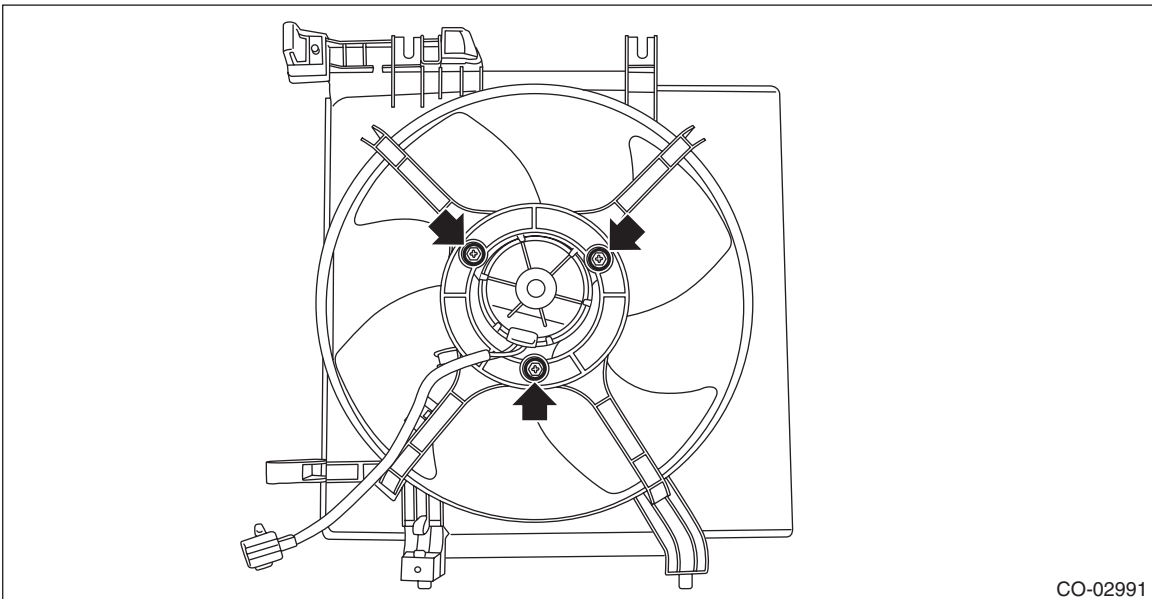

## **D: ASSEMBLY**

Assemble in the reverse order of disassembly.

### ***Tightening torque:***

***5 N·m (0.5 kgf·m, 3.7 ft-lb)***

## **E: INSPECTION**

Check that the radiator main fan, radiator main fan shroud and main fan motor assembly do not have deformation, cracks or damage.