

## Rear Catalytic Converter

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

---

### 3. Rear Catalytic Converter

#### A: REMOVAL

The rear catalytic converter is integrated into the center exhaust pipe; therefore, refer to “Center Exhaust Pipe” for the removal procedure. <Ref. to EX(H4DO)-12, REMOVAL, Center Exhaust Pipe.>

#### B: INSTALLATION

The rear catalytic converter is integrated into the center exhaust pipe; therefore, refer to “Center Exhaust Pipe” for the installation procedure. <Ref. to EX(H4DO)-12, INSTALLATION, Center Exhaust Pipe.>

#### C: INSPECTION

- 1) Check the connections and welded parts for exhaust leaks.
- 2) Make sure there are no holes or rusting.