

Fuel Level Sensor

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

8. Fuel Level Sensor

A: REMOVAL

For removal procedures, refer to the "FU(H4DO)" section. <Ref. to FU(H4DO)-144, REMOVAL, Fuel Level Sensor.>

B: INSTALLATION

For installation procedures, refer to the "FU(H4DO)" section. <Ref. to FU(H4DO)-145, INSTALLATION, Fuel Level Sensor.>

C: INSPECTION

For inspection procedures, refer to the "FU(H4DO)" section. <Ref. to FU(H4DO)-145, INSPECTION, Fuel Level Sensor.>