

# Fuel Sub Level Sensor

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

---

## 9. Fuel Sub Level Sensor

### A: REMOVAL

For removal procedures, refer to the "FU(H4DO)" section. <Ref. to FU(H4DO)-147, REMOVAL, Fuel Sub Level Sensor.>

### B: INSTALLATION

For installation procedures, refer to the "FU(H4DO)" section. <Ref. to FU(H4DO)-150, INSTALLATION, Fuel Sub Level Sensor.>

### C: INSPECTION

For inspection procedures, refer to the "FU(H4DO)" section. <Ref. to FU(H4DO)-151, INSPECTION, Fuel Sub Level Sensor.>