

# System Operation Check Mode

ENGINE (DIAGNOSTICS)

---

## 14. System Operation Check Mode

### A: OPERATION

#### CAUTION:

After executing the system operation check mode, execute the Clear Memory Mode <Ref. to EN(H4DO)(diag)-59, OPERATION, Clear Memory Mode.>.

#### NOTE:

For detailed operation procedures, refer to “PC application help for Subaru Select Monitor”.