

EGR Control Valve

FUEL INJECTION (FUEL SYSTEMS)

15.EGR Control Valve

A: REMOVAL

For removal procedures of EGR control valve, refer to the “EC (H4DO)” section. <Ref. to EC(H4DO)-23, REMOVAL, EGR Control Valve.>

B: INSTALLATION

For installation procedures of EGR control valve, refer to the “EC (H4DO)” section. <Ref. to EC(H4DO)-25, INSTALLATION, EGR Control Valve.>

C: INSPECTION

For inspection procedures of EGR control valve, refer to the “EC (H4DO)” section. <Ref. to EC(H4DO)-26, INSPECTION, EGR Control Valve.>