



## 21.Engine Control Module (ECM)

### A: REMOVAL

- 1) Disconnect the ground cable from battery.

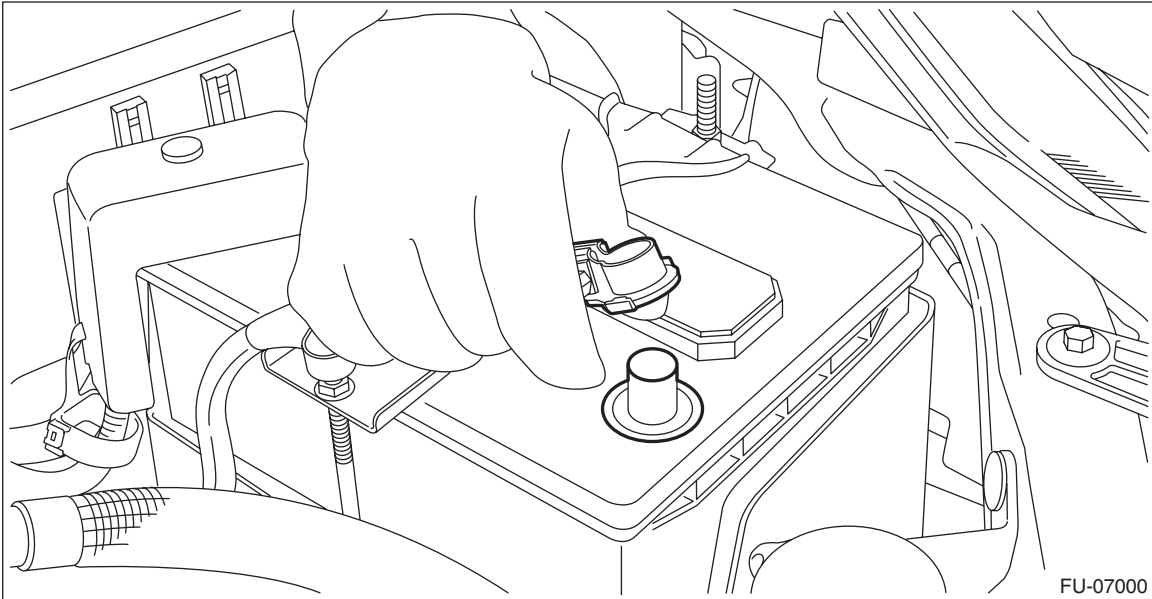


- 2) Remove the glove box. <Ref. to EI-65, REMOVAL, Glove Box.>
- 3) Disconnect the connector from ECM.

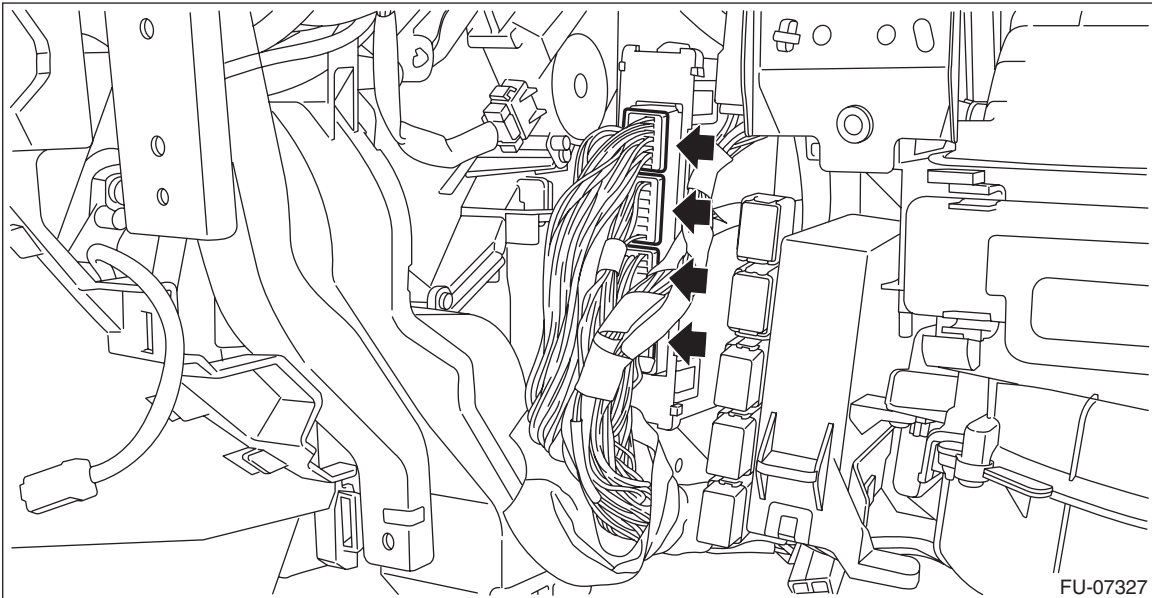

# Engine Control Module (ECM)

## FUEL INJECTION (FUEL SYSTEMS)

4) Remove the nuts to remove the ECM.

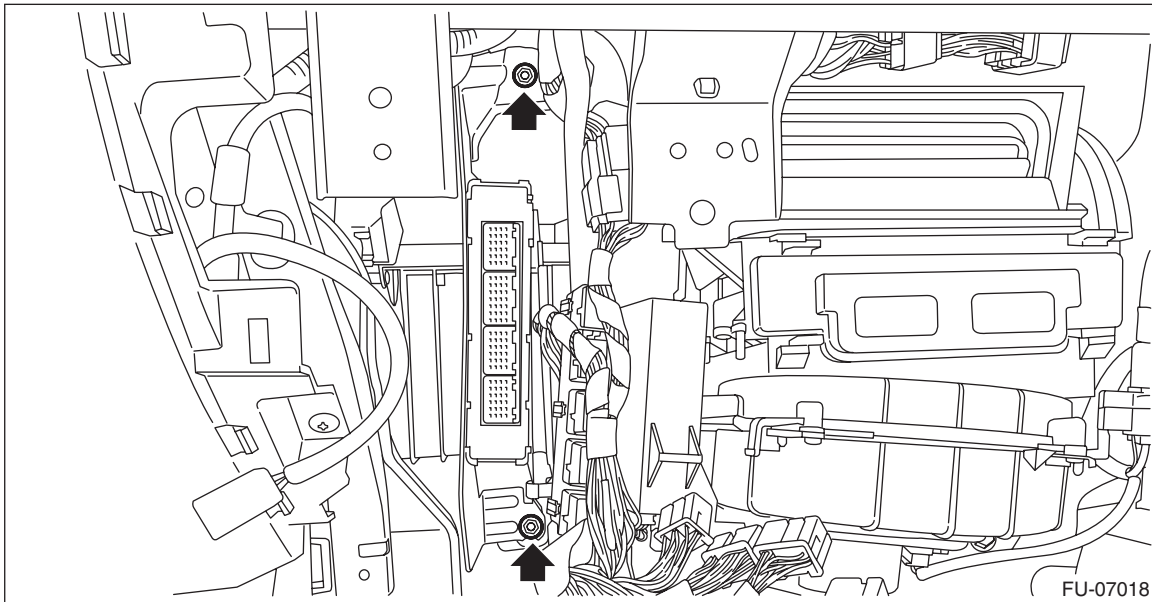

### B: INSTALLATION

Install in the reverse order of removal.

#### CAUTION:

- When the ECM of model with immobilizer has been replaced, be sure to perform the registration of immobilizer system. (Refer to the “REGISTRATION MANUAL FOR IMMOBILIZER”.)
- If replacing ECM or the bracket, replace both parts with new parts at a time.
- After installing the bracket to ECM, do not separate the bracket.
- If the bracket has been installed to ECM in the wrong direction, replace both parts to new parts.

#### NOTE:

When replacing the ECM, be careful not to use the wrong spec. ECM to avoid any damage on the fuel injection system.

#### *Tightening torque:*

*7.5 N·m (0.8 kgf-m, 5.5 ft-lb)*

### C: INSPECTION

Check that the ECM has no deformation, cracks or other damages.