



## 24. Electronic Throttle Control Relay

### A: REMOVAL

- 1) Disconnect the ground cable from battery.

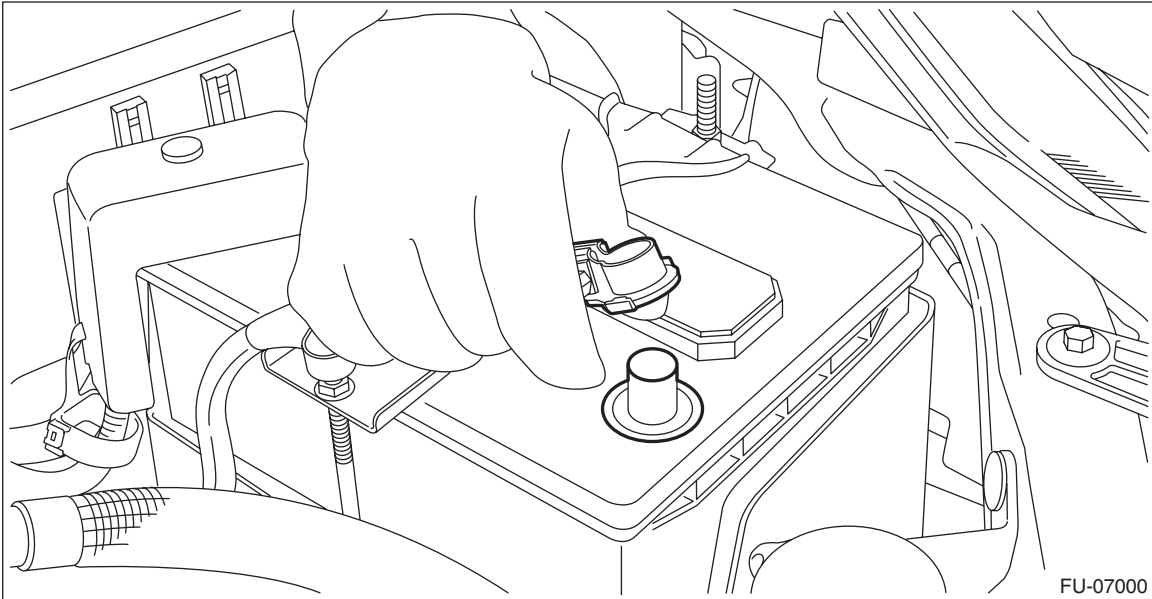

- 2) Remove the glove box. <Ref. to EI-65, REMOVAL, Glove Box.>
- 3) Remove the electronic throttle control relay from the relay block on the back side of the glove box.

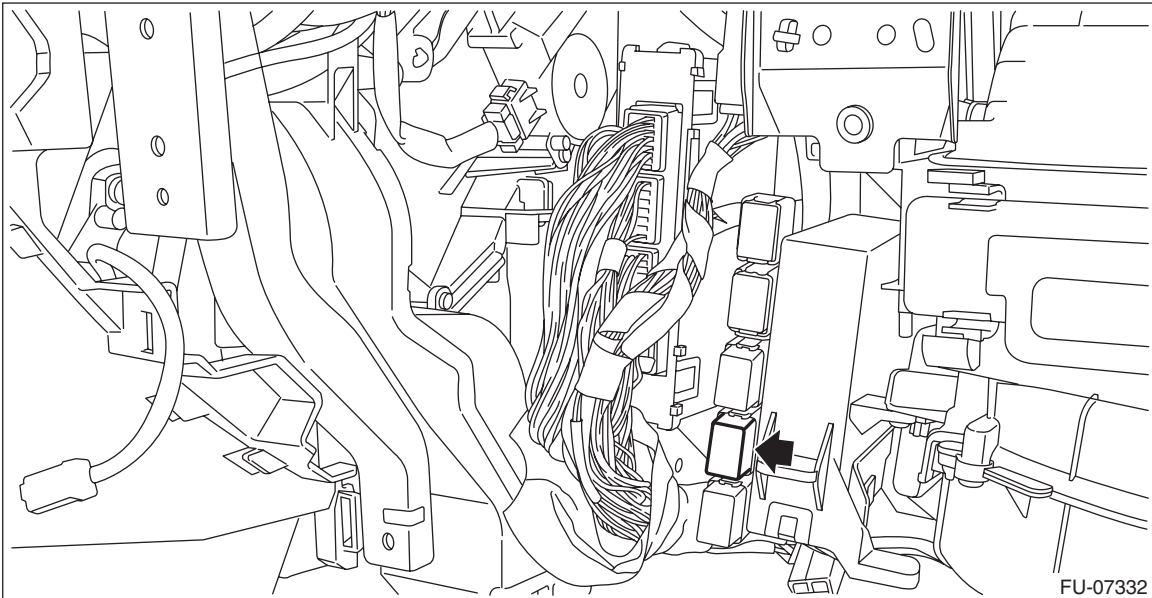

### B: INSTALLATION


Install in the reverse order of removal.

# Electronic Throttle Control Relay

## FUEL INJECTION (FUEL SYSTEMS)

### C: INSPECTION


- 1) Check that the electronic throttle control relay has no deformation, cracks or other damages.
- 2) Measure the resistance between electronic throttle control relay terminals.

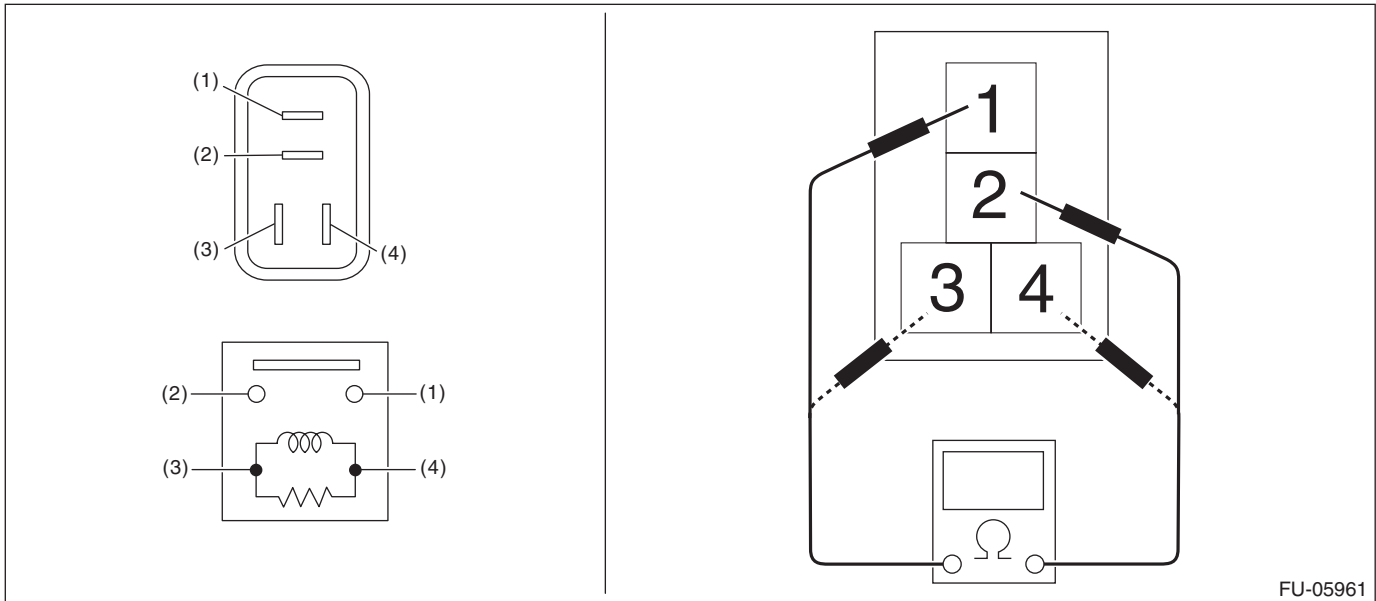

FU-05961

Terminal No.	Standard
1 and 2	1 M $\Omega$ or more
3 and 4	93.8 — 136.4 $\Omega$ (when 20°C (68°F))

- 3) Connect battery positive terminal to terminal No. 3 and battery ground terminal to terminal No. 4, and measure the resistance between the electronic throttle control relay terminals.

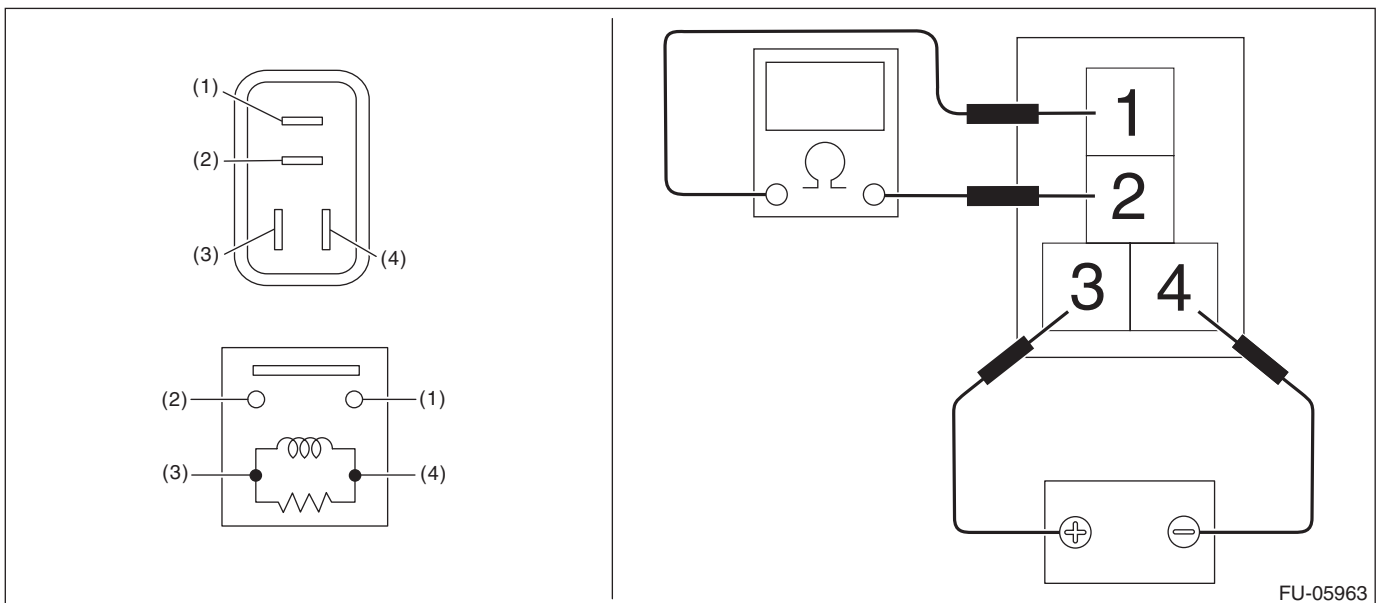

FU-05963

Terminal No.	Standard
1 and 2	Less than 1 $\Omega$