


Engine Wiring Harness

FUEL INJECTION (FUEL SYSTEMS)

4. Engine Wiring Harness

A: REMOVAL

- 1) Release the fuel pressure. <Ref. to FU(H4DO)-109, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>
 - 2) Disconnect the ground cable from battery.
 - 3) Open the fuel filler lid and remove the fuel filler cap.
 - 4) Remove the intake manifold. <Ref. to FU(H4DO)-20, REMOVAL, Intake Manifold.>
 - 5) Disconnect the connector from the engine.
- Structural diagram 1

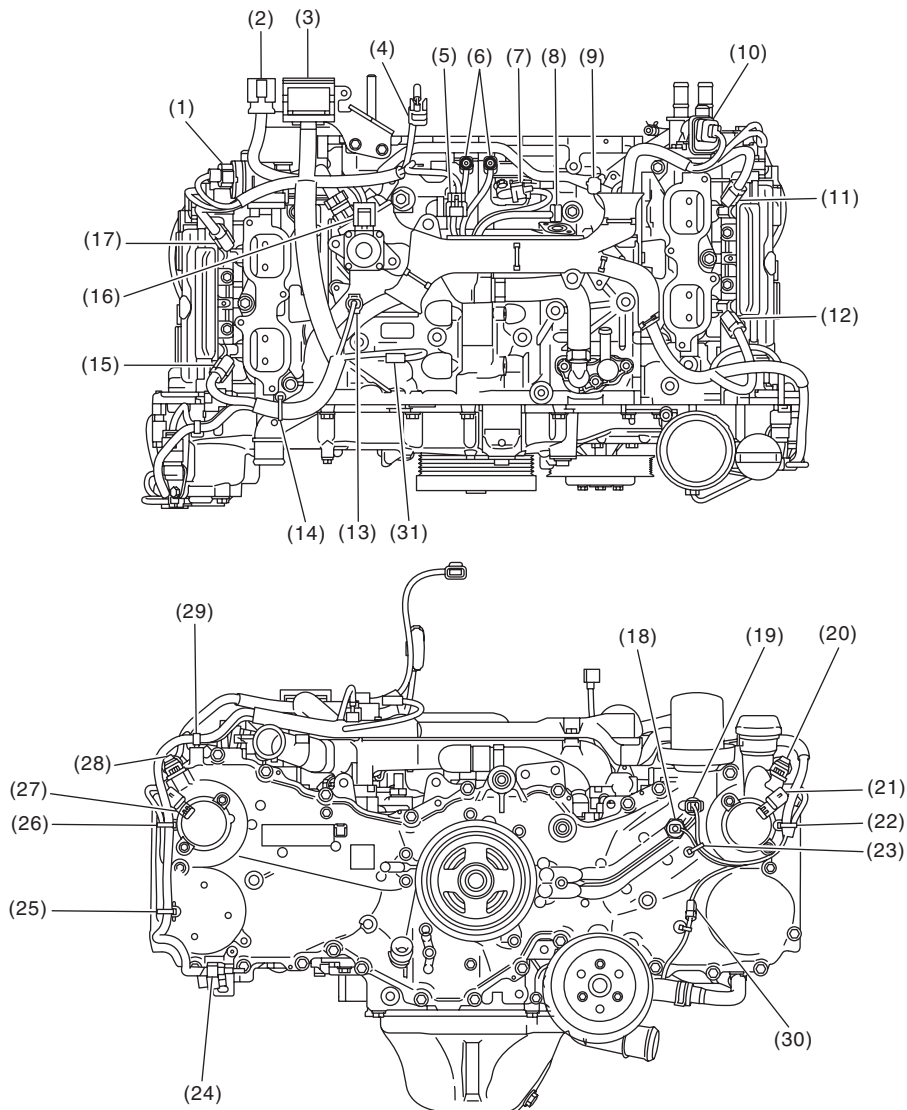

FU-08146

Engine Wiring Harness


FUEL INJECTION (FUEL SYSTEMS)

- (1) Tumble generator valve actuator RH
- (2) Engine harness connector (16P)
- (3) Engine harness connector (54P)
- (4) Throttle position sensor connector
- (5) Manifold pressure sensor connector
- (6) Engine ground (2 locations)
- (7) Crankshaft position sensor
- (8) Knock sensor
- (9) Purge control solenoid valve connector
- (10) Tumble generator valve actuator LH
- (11) Fuel injector (#4)
- (12) Fuel injector (#2)
- (13) Engine coolant temperature sensor
- (14) Remove the clip from the screw hole.
- (15) Fuel injector (#1)
- (16) EGR valve
- (17) Fuel injector (#3)
- (18) Oil pressure switch
- (19) Engine oil temperature sensor
- (20) Camshaft position sensor LH
- (21) Intake oil control solenoid LH
- (22) Remove the clip from the screw hole.
- (23) Remove the clip from the screw hole.
- (24) Remove the clip from the oval hole.
- (25) Remove the clip from the screw hole.
- (26) Remove the clip from the screw hole.
- (27) Intake oil control solenoid RH
- (28) Camshaft position sensor RH
- (29) Remove the clip from the screw hole.
- (30) Oil level switch
- (31) Power steering switch connector

Engine Wiring Harness

FUEL INJECTION (FUEL SYSTEMS)


- Structural diagram 2

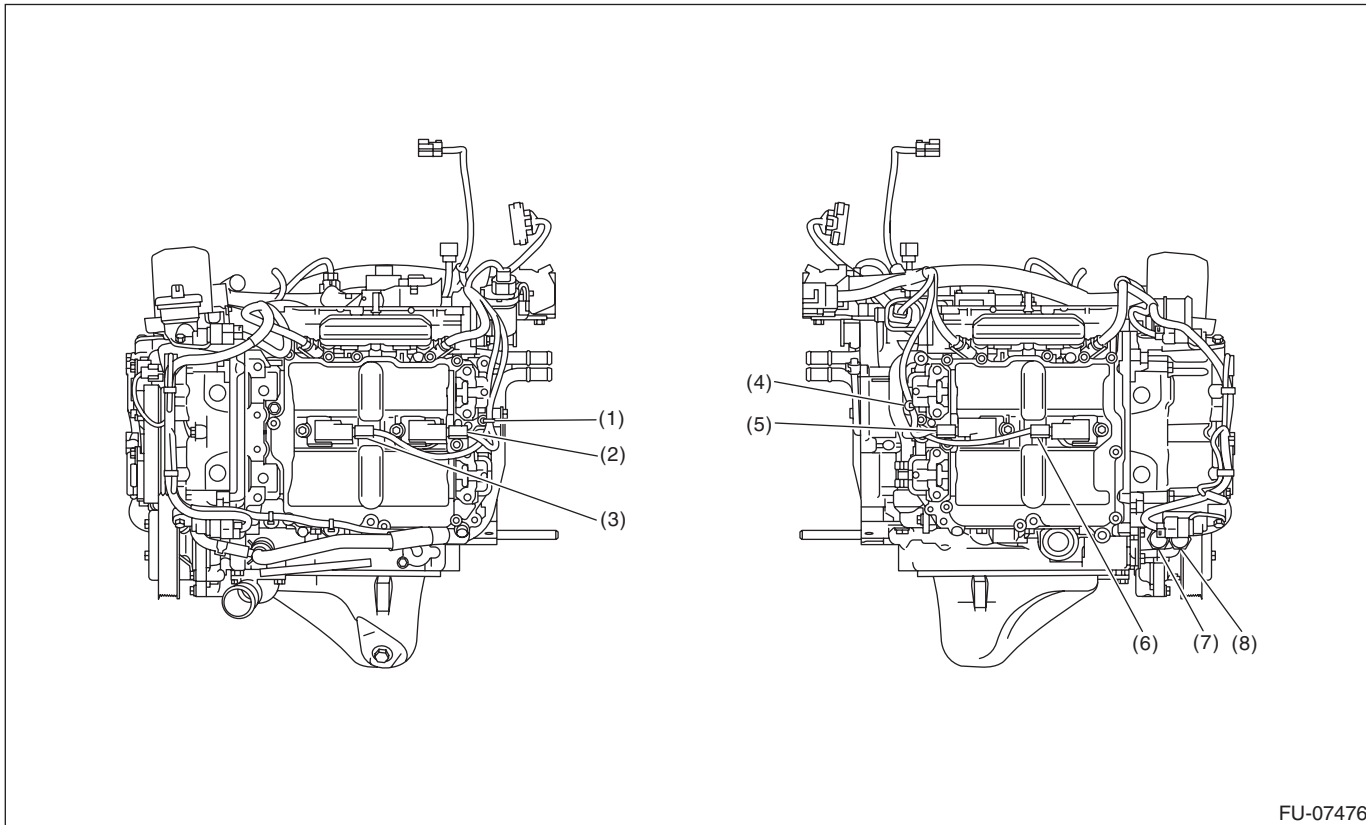

FU-07476

- (1) Remove the clip from the screw hole.
- (2) Ignition coil No. 4
- (3) Ignition coil No. 2
- (4) Remove the clip from the screw hole.
- (5) Ignition coil No. 3
- (6) Ignition coil No. 1
- (7) Rear oxygen sensor
- (8) Front oxygen (A/F) sensor


6) Remove the engine wiring harness.

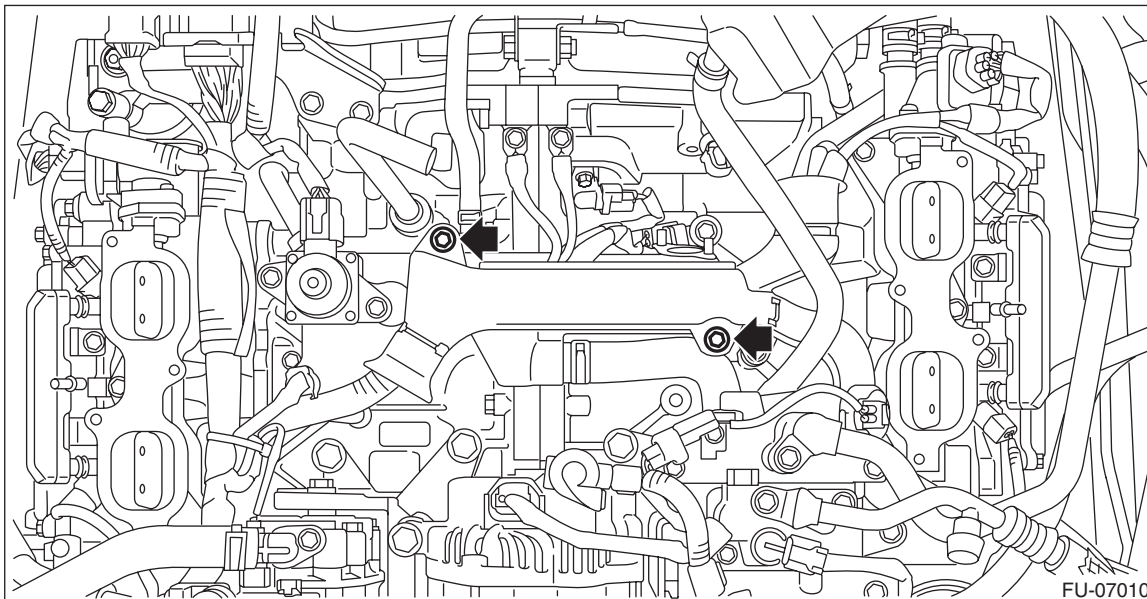

FU-07010

B: INSTALLATION

- 1) Route the engine wiring harness around the engine and connect connectors.
- Structural diagram 1

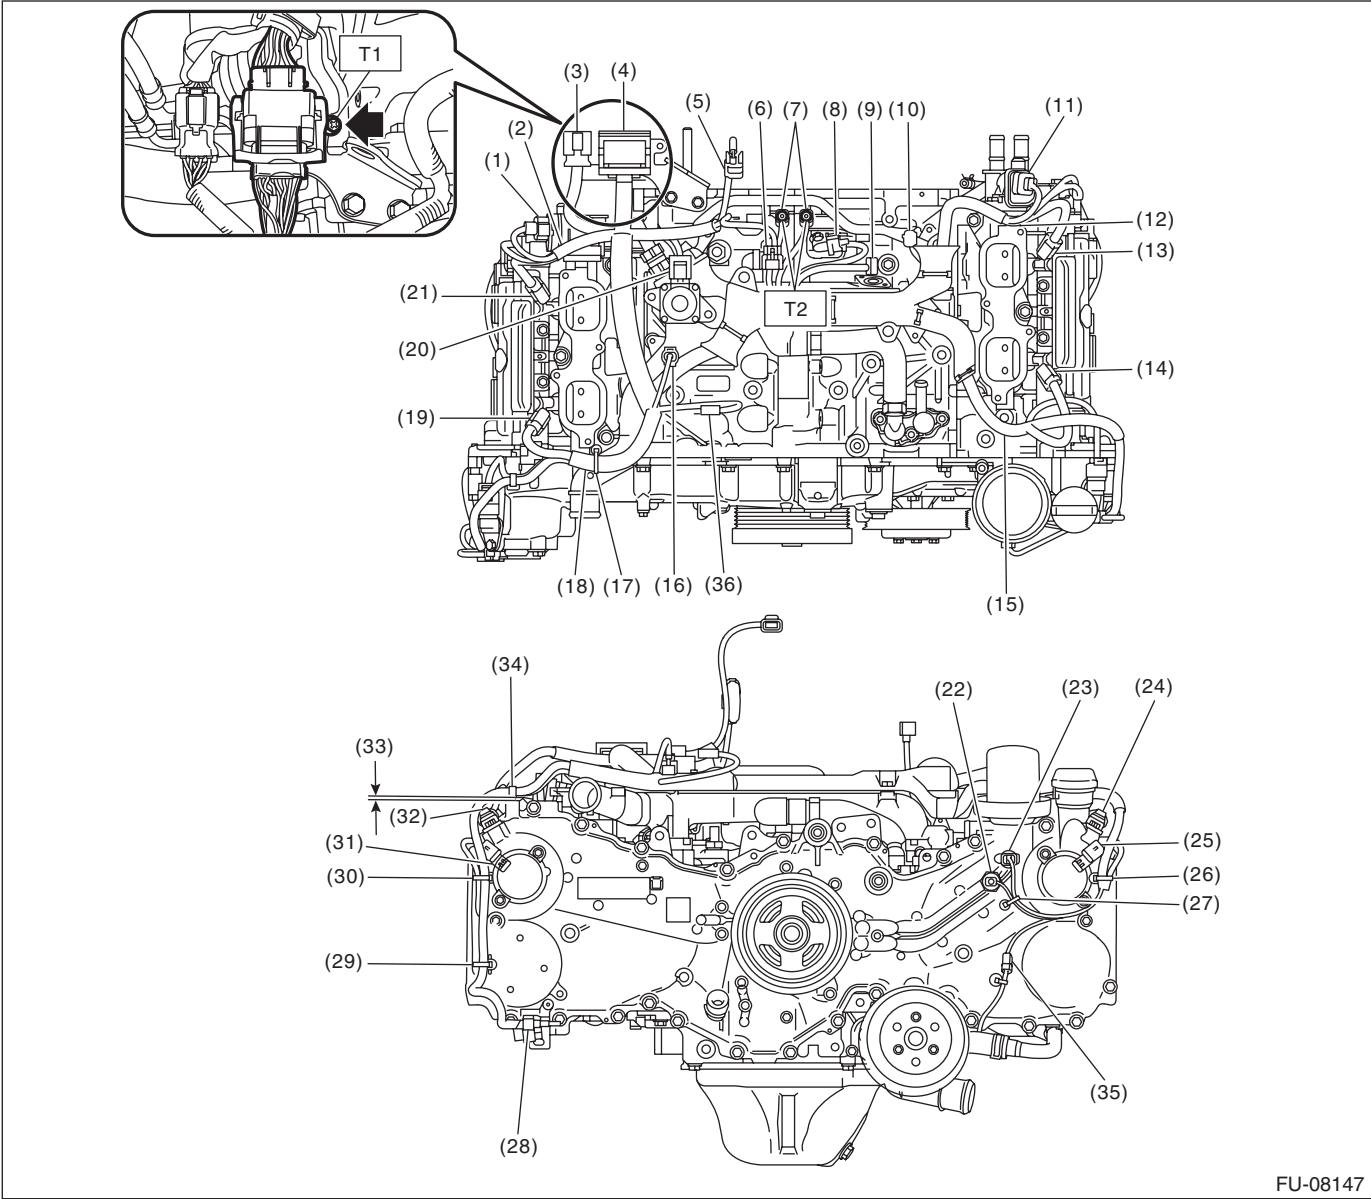

FU-08147

Engine Wiring Harness

FUEL INJECTION (FUEL SYSTEMS)


- (1) Tumble generator valve actuator RH
- (2) Be careful of pinching when installing the intake manifold.
- (3) Engine harness connector (16P)
- (4) Engine harness connector (54P)
- (5) Throttle position sensor connector
- (6) Manifold pressure sensor connector
- (7) Engine ground (2 locations)
- (8) Crankshaft position sensor
- (9) Knock sensor
- (10) Purge control solenoid valve connector
- (11) Tumble generator valve actuator LH
- (12) Be careful of pinching when installing the intake manifold.
- (13) Fuel injector (#4)
- (14) Fuel injector (#2)
- (15) Be careful of pinching when installing the intake manifold and A/C bracket.
- (16) Engine coolant temperature sensor
- (17) Secure the clip to the screw hole.
- (18) Be careful of pinching when installing the intake manifold.
- (19) Fuel injector (#1)
- (20) EGR valve
- (21) Fuel injector (#3)
- (22) Oil pressure switch
- (23) Engine oil temperature sensor
- (24) Camshaft position sensor LH
- (25) Intake oil control solenoid LH
- (26) Secure the clip to the screw hole.
- (27) Secure the clip to the screw hole.
- (28) Secure the clip to the oval hole.
- (29) Secure the clip to the screw hole.
- (30) Secure the clip to the screw hole.
- (31) Intake oil control solenoid RH
- (32) Camshaft position sensor RH
- (33) Maximum of 0 — 2 mm (0 — 0.079 in) gap is allowed.
- (34) Secure the clip to the screw hole.
- (35) Oil level switch
- (36) Power steering switch connector

Tightening torque: N·m (kgf·m, ft·lb)

T1: 7.5 (0.8, 5.5)

T2: 19 (1.9, 14.0)

- Structural diagram 2

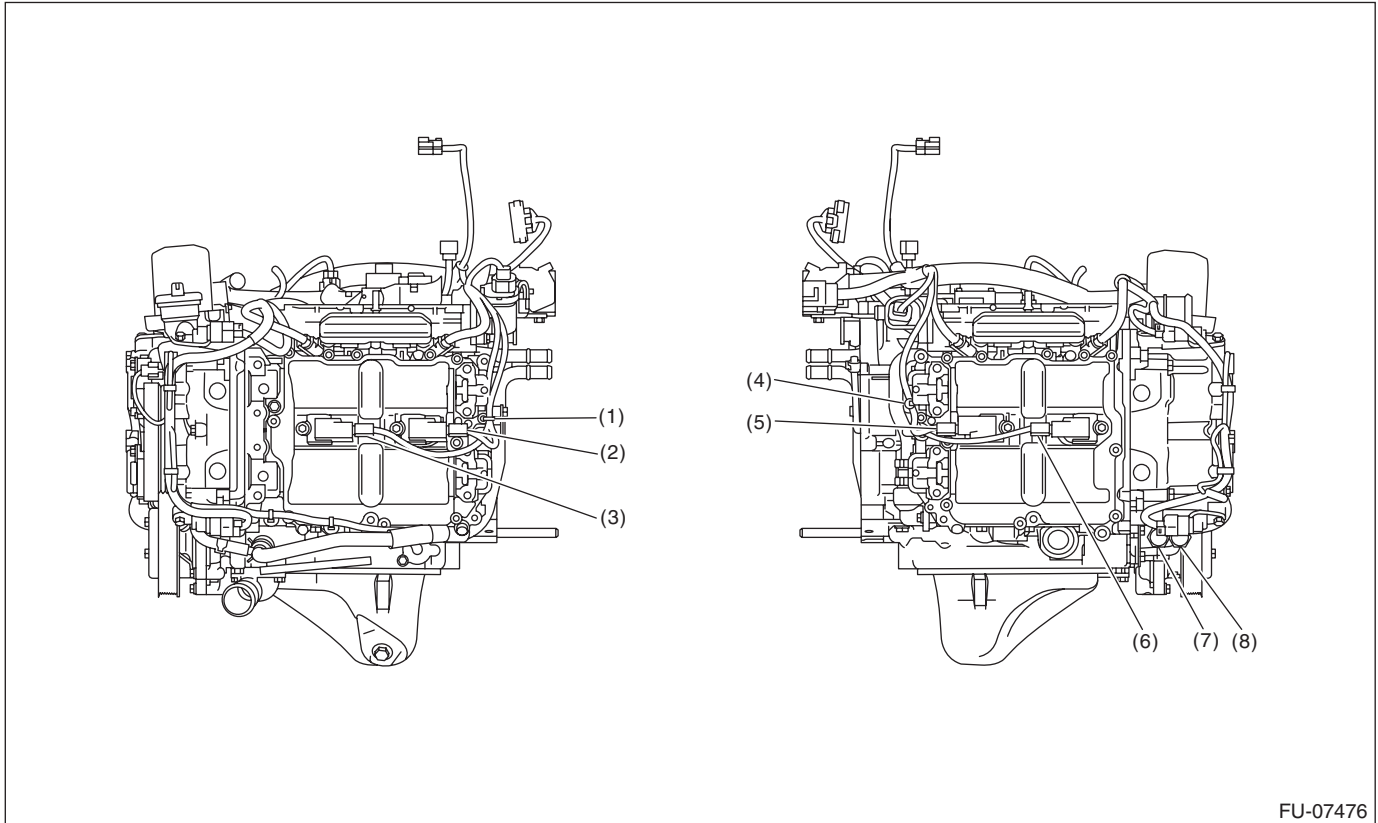

FU-07476

- (1) Secure the clip to the screw hole.
- (2) Ignition coil No. 4
- (3) Ignition coil No. 2
- (4) Secure the clip to the screw hole.
- (5) Ignition coil No. 3
- (6) Ignition coil No. 1
- (7) Rear oxygen sensor
- (8) Front oxygen (A/F) sensor


Engine Wiring Harness

FUEL INJECTION (FUEL SYSTEMS)

2) Install the engine wiring harness.

Tightening torque:

6.4 N·m (0.7 kgf·m, 4.7 ft·lb)

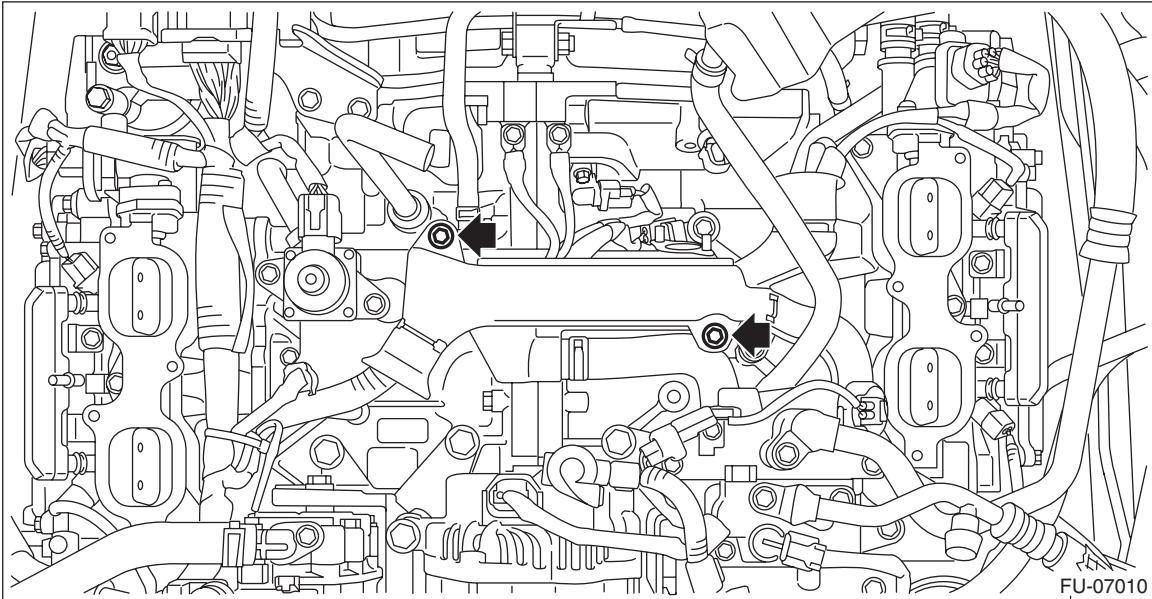

3) Install the intake manifold. <Ref. to FU(H4DO)-29, INSTALLATION, Intake Manifold.>

4) Connect the battery ground terminal.

C: INSPECTION

- 1) Check that the engine wiring harness does not have deformation, cracks and any other damage.
- 2) Check the engine wiring harness for contamination or clogging.