

## Crankshaft Position Sensor Plate

FUEL INJECTION (FUEL SYSTEMS)

---

### 8. Crankshaft Position Sensor Plate

#### A: REMOVAL

The crankshaft position sensor plate is tightened together with the drive plate or flywheel; therefore, refer to “Drive Plate” or “Flywheel” for removal procedure. <Ref. to CVT-157, REMOVAL, Drive Plate.> <Ref. to CL-13, REMOVAL, Flywheel.>

#### B: INSTALLATION

The crankshaft position sensor plate is tightened together with the drive plate or flywheel; therefore, refer to “Drive Plate” or “Flywheel” for installation procedure. <Ref. to CVT-157, INSTALLATION, Drive Plate.> <Ref. to CL-13, INSTALLATION, Flywheel.>

#### C: INSPECTION

Check that the crankshaft position sensor plate has no deformation, cracks or other damages.