

## **3. Ignition Coil**

### **A: REMOVAL**

Direct ignition type is adopted. Refer to "Spark Plug" for removal procedure. <Ref. to IG(H4DO)-4, REMOVAL, Spark Plug.>

### **B: INSTALLATION**

Direct ignition type is adopted. Refer to "Spark Plug" for the installation procedure. <Ref. to IG(H4DO)-5, INSTALLATION, Spark Plug.>

### **C: INSPECTION**

For inspection procedure, refer to "Diagnostics for Engine Starting Failure". <Ref. to EN(H4DO)(diag)-77, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.>

# Ignition Coil

IGNITION

---

IG(H4DO)-10

# STARTING/CHARGING SYSTEMS

# *SC(H4DO)*

---

	<b>Page</b>
1. General Description .....	2
2. Starter .....	7
3. Generator .....	29
4. Battery .....	51