

6. Resonator Chamber

A: REMOVAL

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to “Air Cleaner Case” for removal procedure. <Ref. to IN(H4DO)-7, REMOVAL, Air Cleaner Case.>

B: INSTALLATION

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to “Air Cleaner Case” for installation procedure. <Ref. to IN(H4DO)-10, INSTALLATION, Air Cleaner Case.>

C: INSPECTION

Check that the resonator chamber has no deformation, cracks or other damages.

Resonator Chamber

INTAKE (INDUCTION)

MECHANICAL

ME(H4DO)

	Page
1. General Description	2
2. Compression	24
3. Idle Speed	26
4. Ignition Timing	27
5. Intake Manifold Vacuum	28
6. Engine Oil Pressure	30
7. Fuel Pressure	32
8. Cam Clearance	34
9. Engine Assembly	45
10. Engine Mounting	71
11. Preparation for Overhaul	79
12. V-belt	80
13. Crank Pulley	87
14. Chain Cover	96
15. Timing Chain Assembly	111
16. Cam Sprocket	133
17. Crank Sprocket	141
18. Rocker Cover	143
19. Camshaft	156
20. Cam Carrier	157
21. Cylinder Head	202
22. Cylinder Block	243
23. Intake and Exhaust Valve	347
24. Piston	348
25. Connecting Rod	349
26. Crankshaft	350
27. Engine Trouble in General	351
28. Engine Noise	357