

## 26.Crankshaft

### A: SPECIFICATION

Refer to “Cylinder Block” for removal and installation procedures of the crankshaft. <Ref. to ME(H4DO)-243, REMOVAL, Cylinder Block.> <Ref. to ME(H4DO)-261, INSTALLATION, Cylinder Block.>