
## 1. General Description

## A: SPECIFICATION

Accelerator pedal Stroke At pedal pad

50 — 59 mm (1.97 — 2.32 in)

#### **B: COMPONENT**

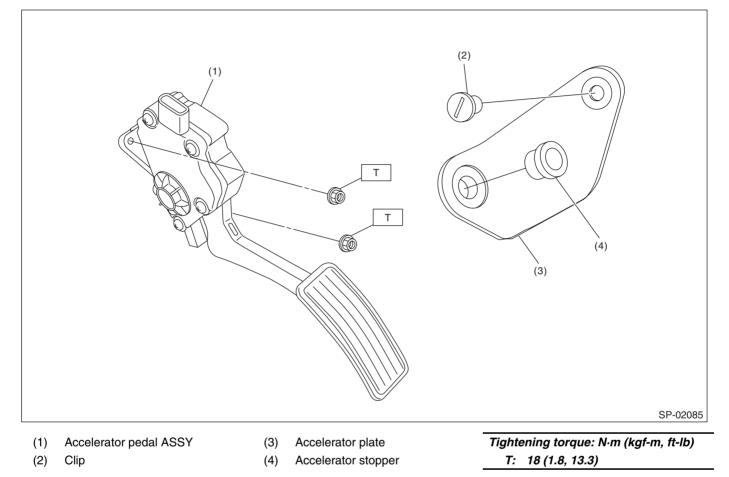

# C: CAUTION

- Prior to starting work, pay special attention to the following:
  - 1. Always wear work clothes, a work cap, and protective shoes. Additionally, wear a helmet, protective goggles, etc. if necessary.
  - 2. Protect the vehicle using a seat cover, fender cover, etc.
  - 3. Prepare the service tools, clean cloth, containers to catch grease and oil, etc.
- Vehicle components are extremely hot immediately after driving. Be wary of receiving burns from heated parts.

• When performing a repair, identify the cause of trouble and avoid unnecessary removal, disassembly and replacement.

- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from battery.
- Always use the jack-up point when the shop jacks or rigid racks are used to support the vehicle.
- Remove contamination including dirt and corrosion before removal, installation, disassembly or assembly.
- Keep the removed parts in order and protect them from dust and dirt.
- All removed parts, if to be reused, should be reinstalled in the original positions with attention to the correct directions, etc.
- Bolts, nuts and washers should be replaced with new parts as required.
- Be sure to tighten the fasteners including bolts and nuts to the specified torque.

## SP(H4DO)-2

# **D: PREPARATION TOOL**

#### 1. SPECIAL TOOL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
	1B022XU0	SUBARU SELECT MONITOR III KIT	Used for inspecting the accelerator pedal.
ST1B022XU0			

### 2. GENERAL TOOL

TOOL NAME	REMARKS	
Circuit tester	Used for measuring voltage.	