


## 11. Radiator Fan Control Unit

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the radiator fan control unit.
  - (1) Disconnect the connector (A) from the radiator fan control unit.
  - (2) Remove screws which secure the radiator fan control unit.

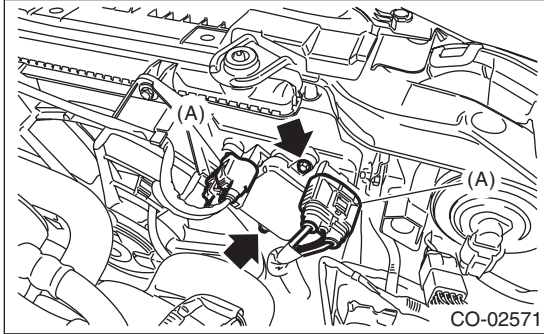

### B: INSTALLATION

Install in the reverse order of removal.

**Tightening torque:**

**2.6 N·m (0.3 kgf·m, 1.9 ft·lb)**