

# EGR Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

---

## 4. EGR Valve

### A: REMOVAL

For removal procedure, refer to “FU(H6DO)” section. <Ref. to FU(H6DO)-42, REMOVAL, EGR Valve.>

### B: INSTALLATION

For installation procedure, refer to “FU(H6DO)” section. <Ref. to FU(H6DO)-42, INSTALLATION, EGR Valve.>

### C: INSPECTION

For inspection procedures, refer to the “FU(H6DO)” section. <Ref. to FU(H6DO)-43, INSPECTION, EGR Valve.>