## 14.System Operation Check Mode

## **A: OPERATION**

## **CAUTION:**

After executing the system operation check mode, execute the Clear Memory Mode. <Ref. to EN(H6DO)(diag)-64, OPERATION, Clear Memory Mode.>

## NOTE:

For detailed operation procedures, refer to "PC application help for Subaru Select Monitor".