

Fuel Pump Control Unit


FUEL INJECTION (FUEL SYSTEMS)

21. Fuel Pump Control Unit


A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the trunk trim panel assembly - side on the RH side. (Sedan model) <Ref. to EI-111, REMOVAL, Rear Quarter Trim.>
- 3) Remove the right side rear quarter trim. (OUTBACK model) <Ref. to EI-111, REMOVAL, Rear Quarter Trim.>
- 4) Remove the fuel pump control unit.

- Sedan model

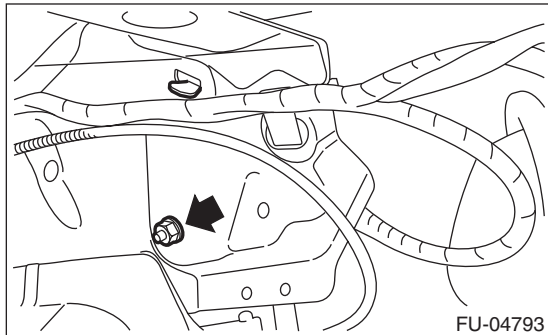


- OUTBACK model

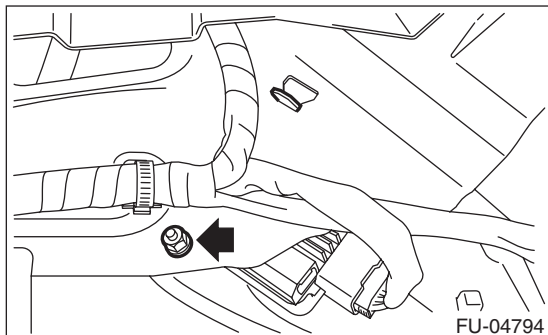


- 5) Disconnect the connector from fuel pump control unit.

- Sedan model

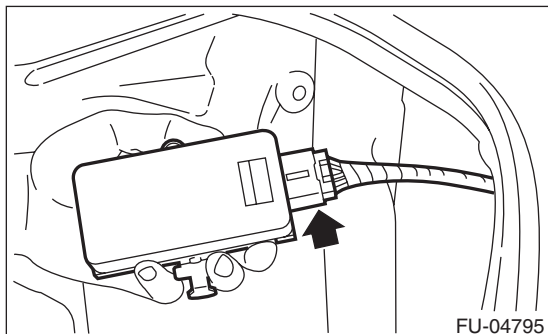

- OUTBACK model

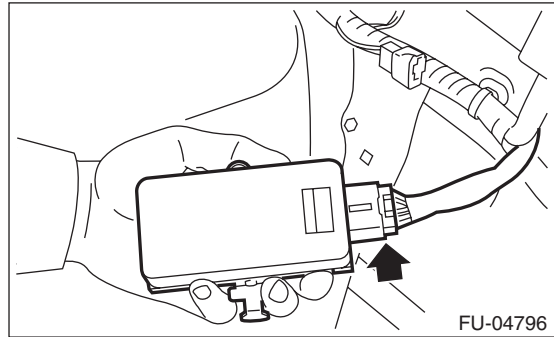

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

5 N·m (0.5 kgf-m, 3.7 ft-lb)

C: INSPECTION

Check that the fuel pump control unit has no deformation, cracks or other damages.