

29. Fuel Damper

A: REMOVAL

WARNING:


Place “NO OPEN FLAMES” signs near the working area.

CAUTION:

- Be careful not to spill fuel.
- Catch the fuel from hoses using a container or cloth.

1) Release the fuel pressure. <Ref. to FU(H6DO)-59, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>

2) Disconnect the fuel delivery hose (A) from fuel damper and remove the fuel damper.

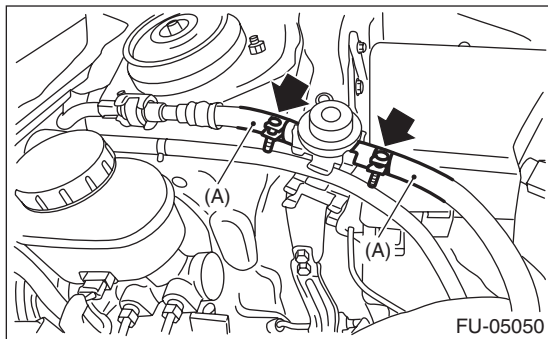

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

For information about connecting fuel delivery hose, refer to “Fuel Delivery and Evaporation Lines”. <Ref. to FU(H6DO)-85, CONNECTING THE FUEL DELIVERY HOSE AND FUEL HOSE, INSTALLATION, Fuel Delivery and Evaporation Lines.>

C: INSPECTION

- 1) Check that the fuel damper has no deformation, cracks or other damages.
- 2) Check the fuel delivery hose for cracks, damage or looseness.