

6. Resonator Chamber

A: REMOVAL

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to “Air Cleaner Case” for removal procedure. <Ref. to IN(H6DO)-5, REMOVAL, Air Cleaner Case.>

B: INSTALLATION

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to “Air Cleaner Case” for installation procedure. <Ref. to IN(H6DO)-5, INSTALLATION, Air Cleaner Case.>

C: INSPECTION

Check that the resonator chamber has no deformation, cracks or other damages.

Resonator Chamber

INTAKE (INDUCTION)

IN(H6DO)-10

MECHANICAL

ME(H6DO)

	Page
1. General Description	2
2. Compression	26
3. Idle Speed	27
4. Ignition Timing	28
5. Intake Manifold Vacuum	29
6. Engine Oil Pressure	30
7. Fuel Pressure	31
8. Valve Clearance	32
9. Engine Assembly	36
10. Engine Mounting	45
11. Preparation for Overhaul	50
12. V-belt	51
13. Crank Pulley	52
14. Chain Cover	53
15. Timing Chain Assembly	62
16. Cam Sprocket	81
17. Crank Sprocket	82
18. Camshaft	83
19. Cylinder Head	92
20. Cylinder Block	105
21. Oil Flow Control Solenoid Valve	127
22. Intake and Exhaust Valve	128
23. Piston	129
24. Connecting Rod	130
25. Crankshaft	131
26. Engine Trouble in General	132
27. Engine Noise	138